

**TECHGLOBE Sp. z o.o.**

Kolejowa 12, 23-200 Kraśnik, Poland

Tax Identification Number (NIP): PL9462697129


+48 510 510 945




[www.techglobe.pl](http://www.techglobe.pl)

# **INSTALLATION INSTRUCTIONS SHOWER ENCLOSURE**


## **A1**

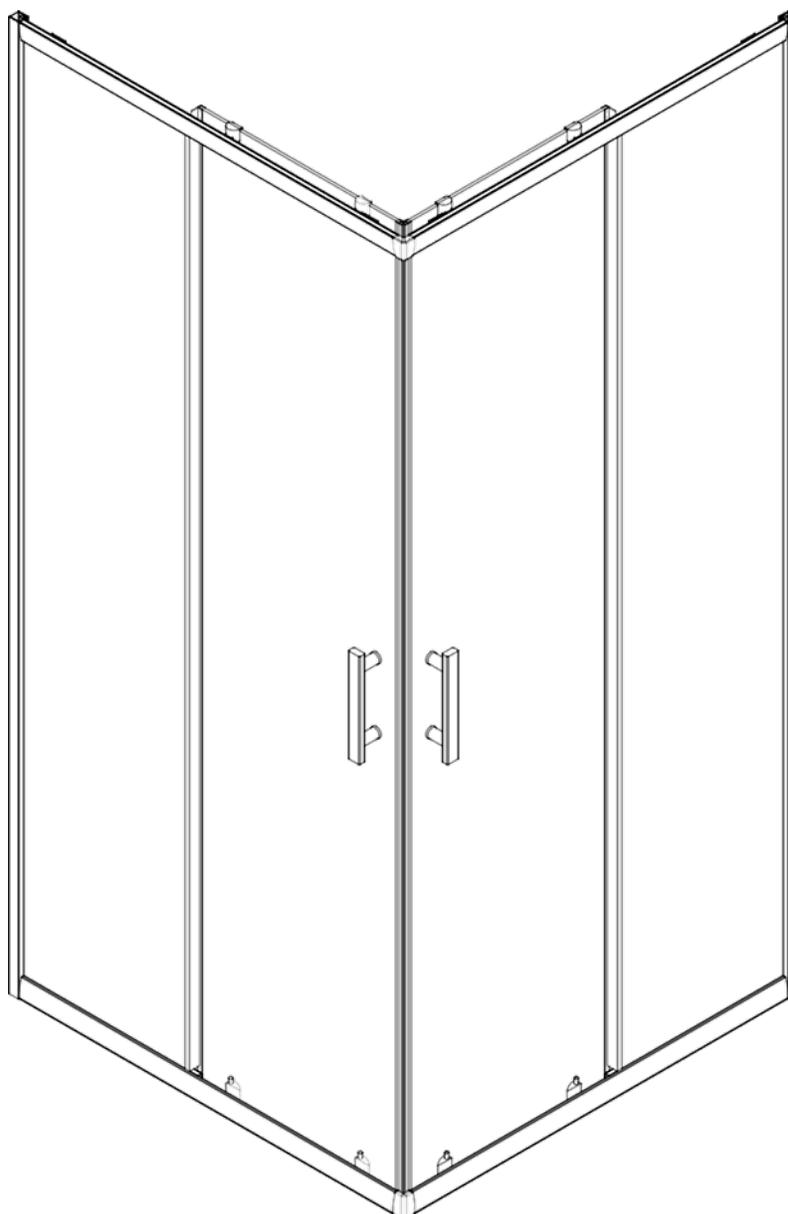


Illustrative drawing (exploded view):

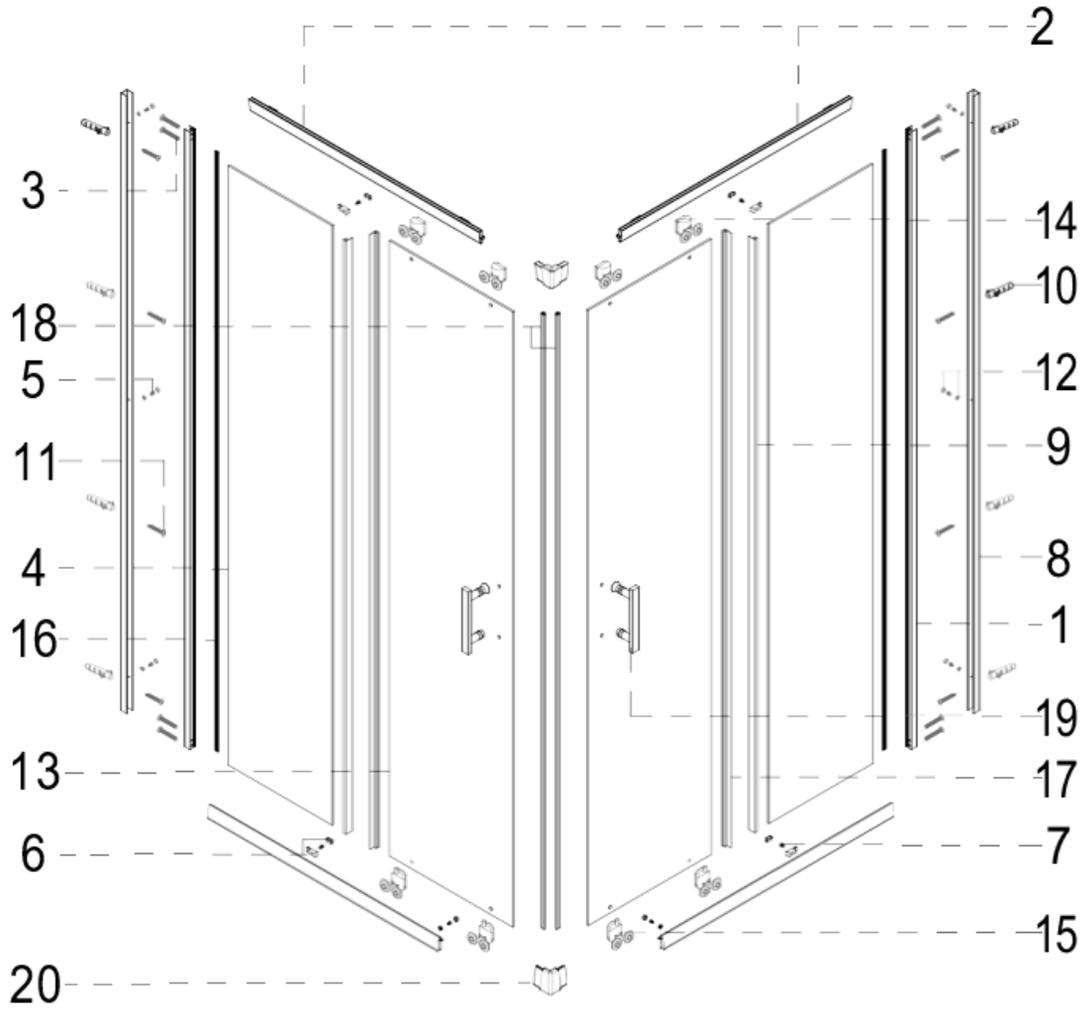



Required tools:

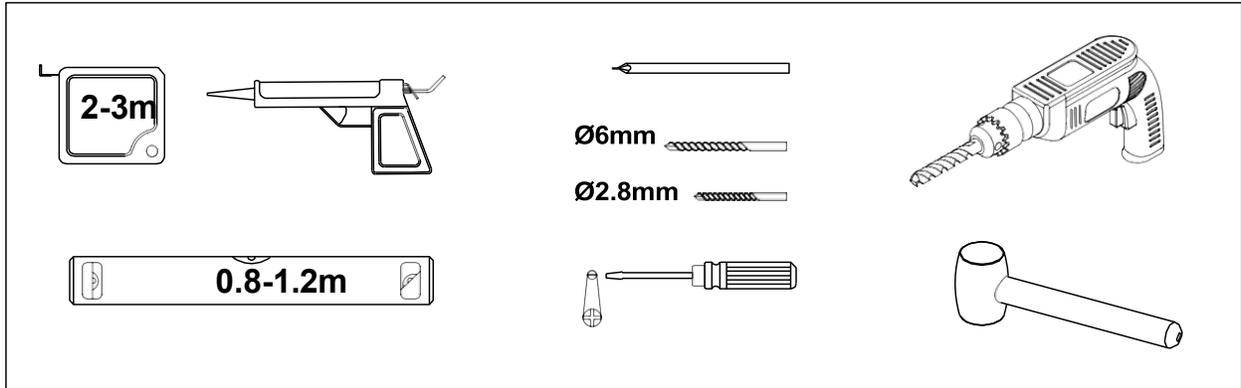



List of components:

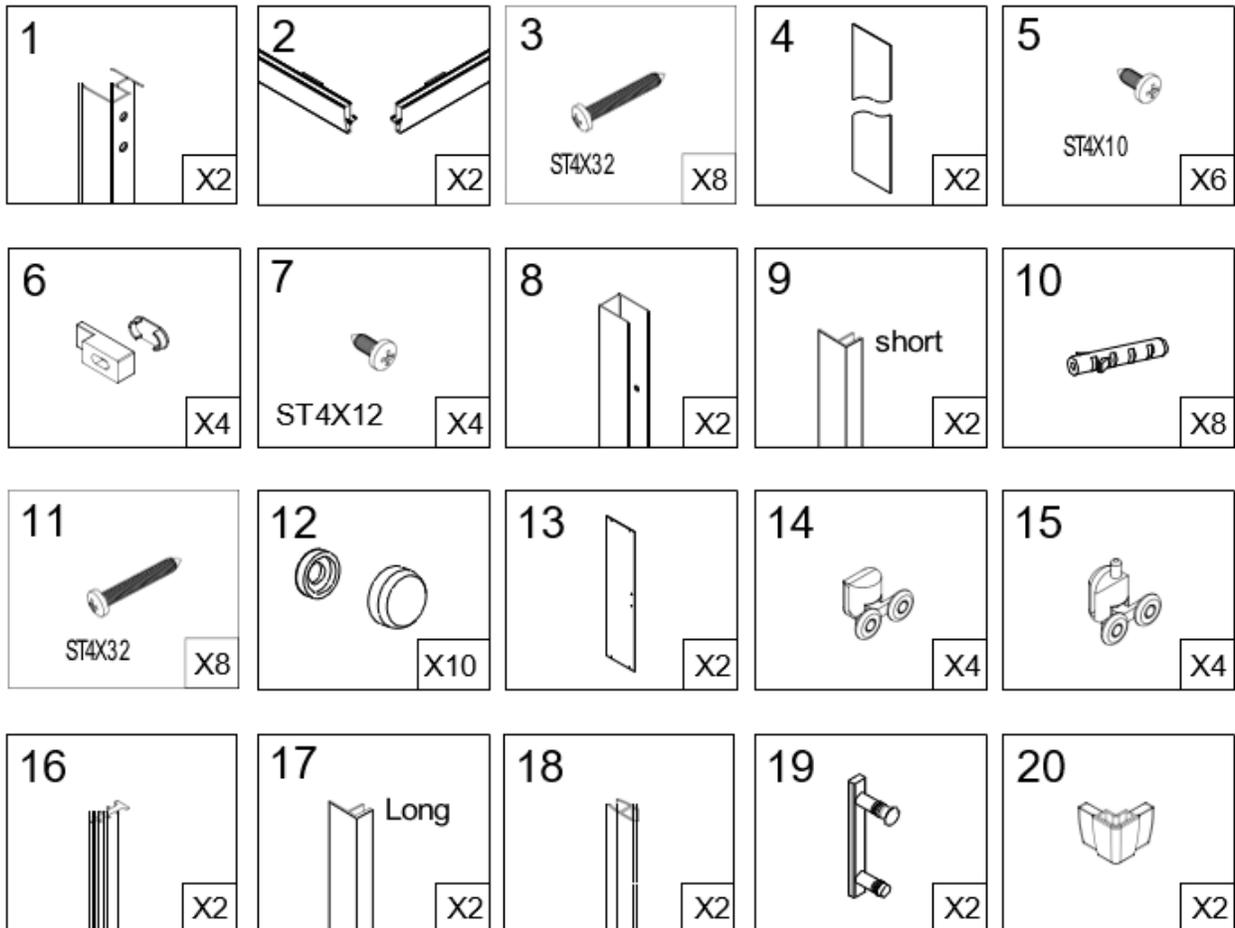


1. Assemble the shower enclosure frame – connect the vertical slats (1) to the horizontal slats (2) using screws (3). Connect the horizontal slats with a corner piece (20) and secure the connection with screws (7) and caps (12).

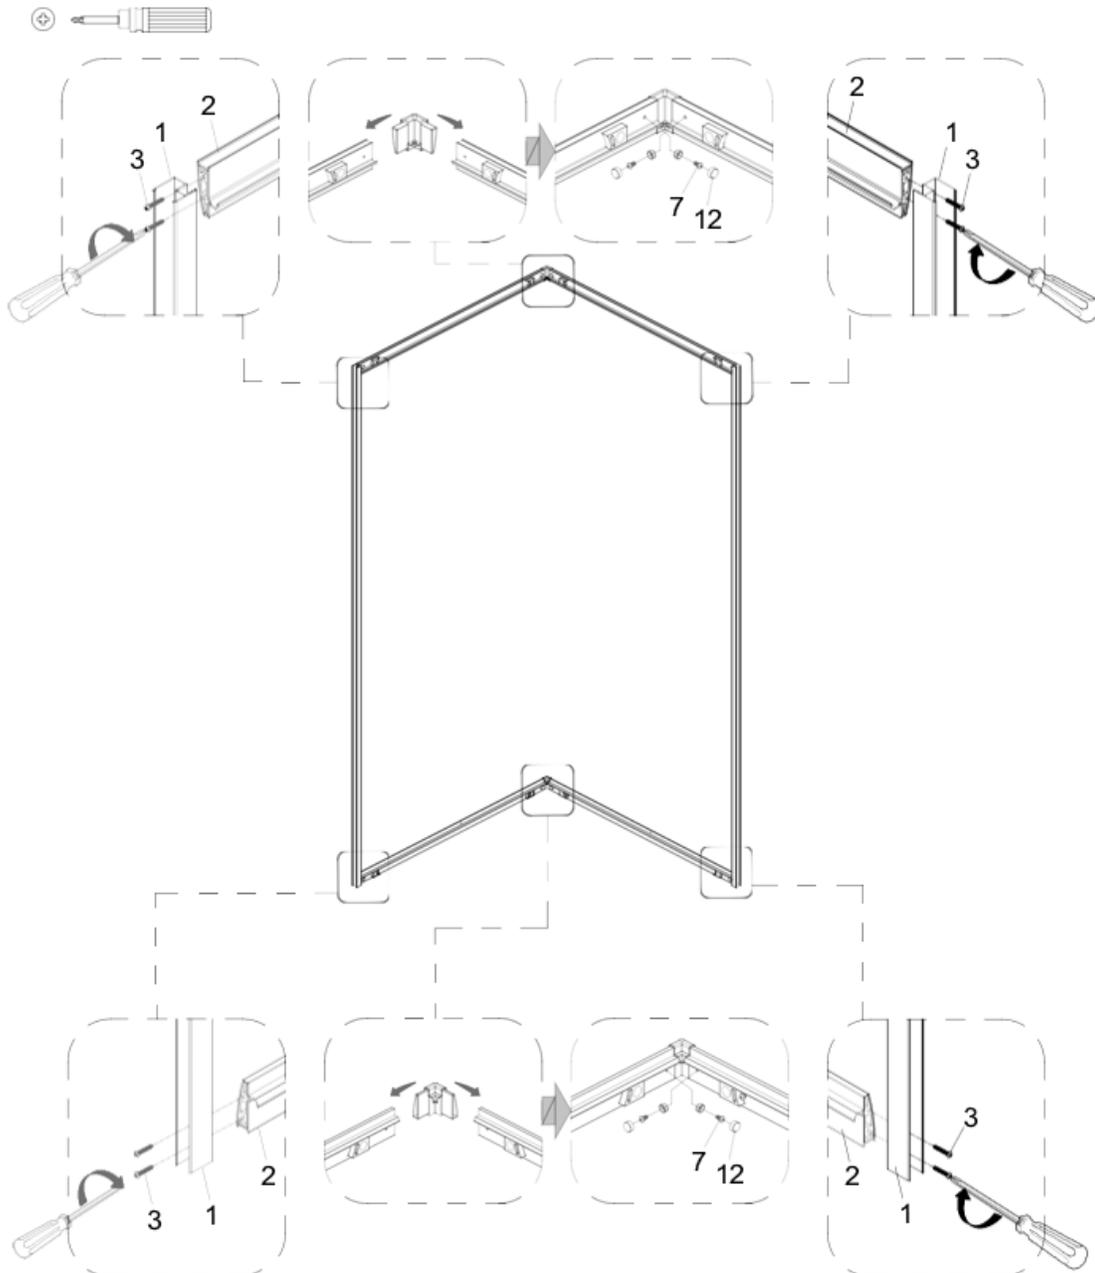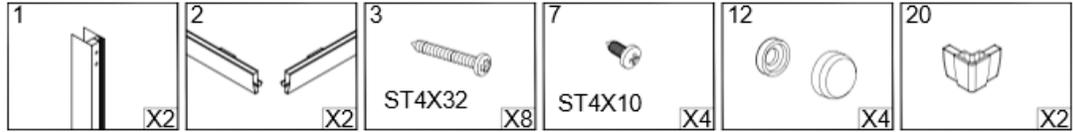


2. Insert the glass side panels (4) into the prepared frame and secure them with brackets (6) and screws (7).

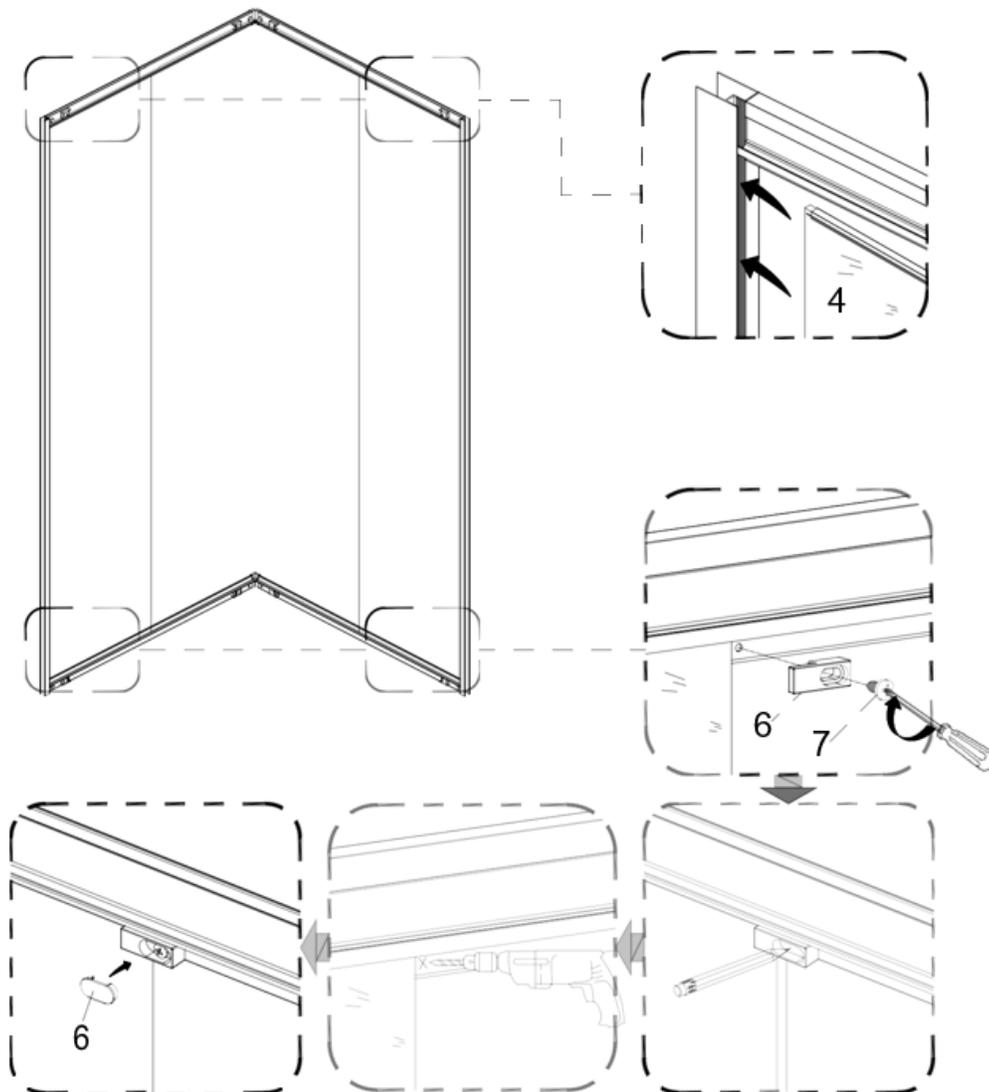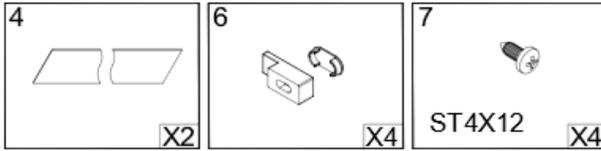


3. Pre-position the enclosure in the installation location. Mark the mounting locations for the slats (1). The mounting holes for the enclosure are approximately 20-25 mm closer than the nominal dimensions of the enclosure (e.g. for a 90 cm x 100 cm enclosure, the mounting holes will be approximately 88 cm x 98 cm from the corner of the wall). Check the length of the shower enclosure walls and transfer the dimensions to the wall in such a way as to maintain right angles and a rectangular shape. Then position the strips vertically and mark the points for drilling the mounting holes. Next, drill the holes, insert the dowels (10) and screw the strips (8) in place using screws (11).

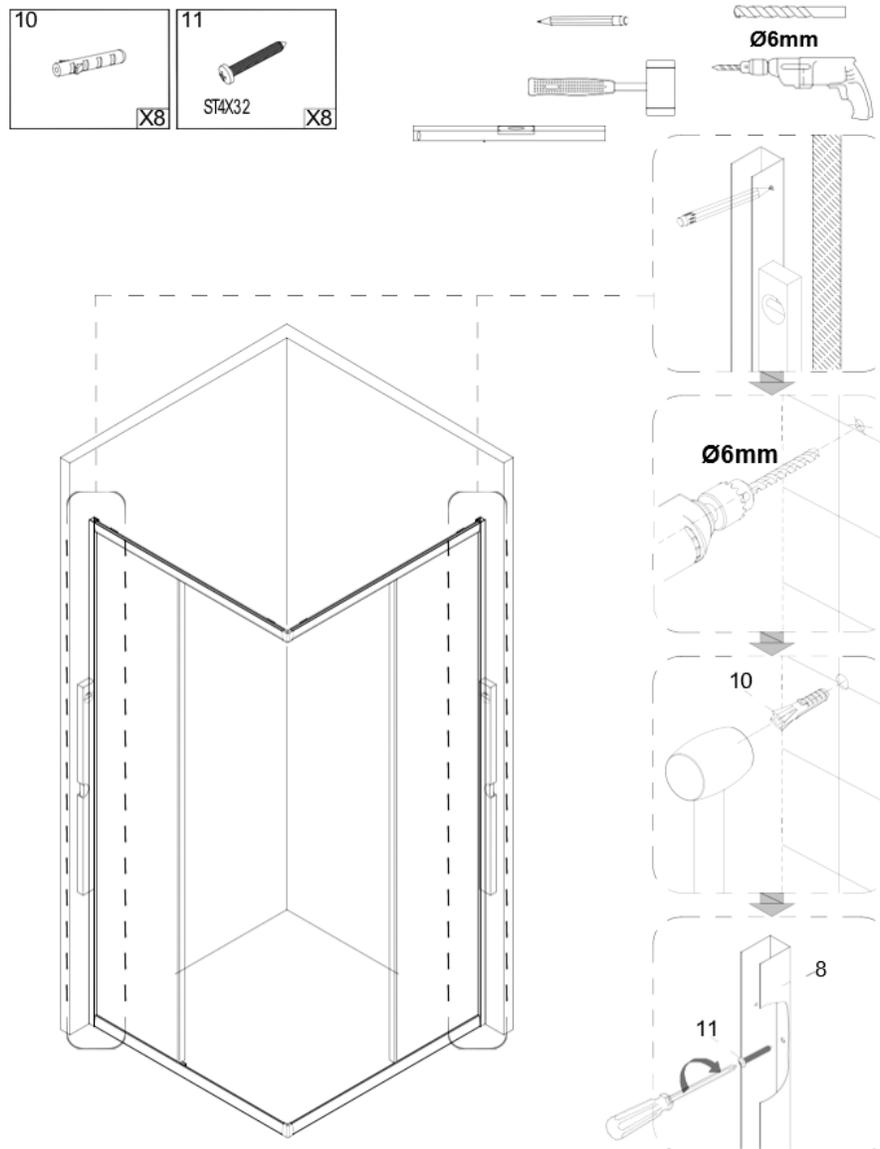

4. Connect the frame to the slats (8). Fit the edging (9) to the installed glass panels (4).

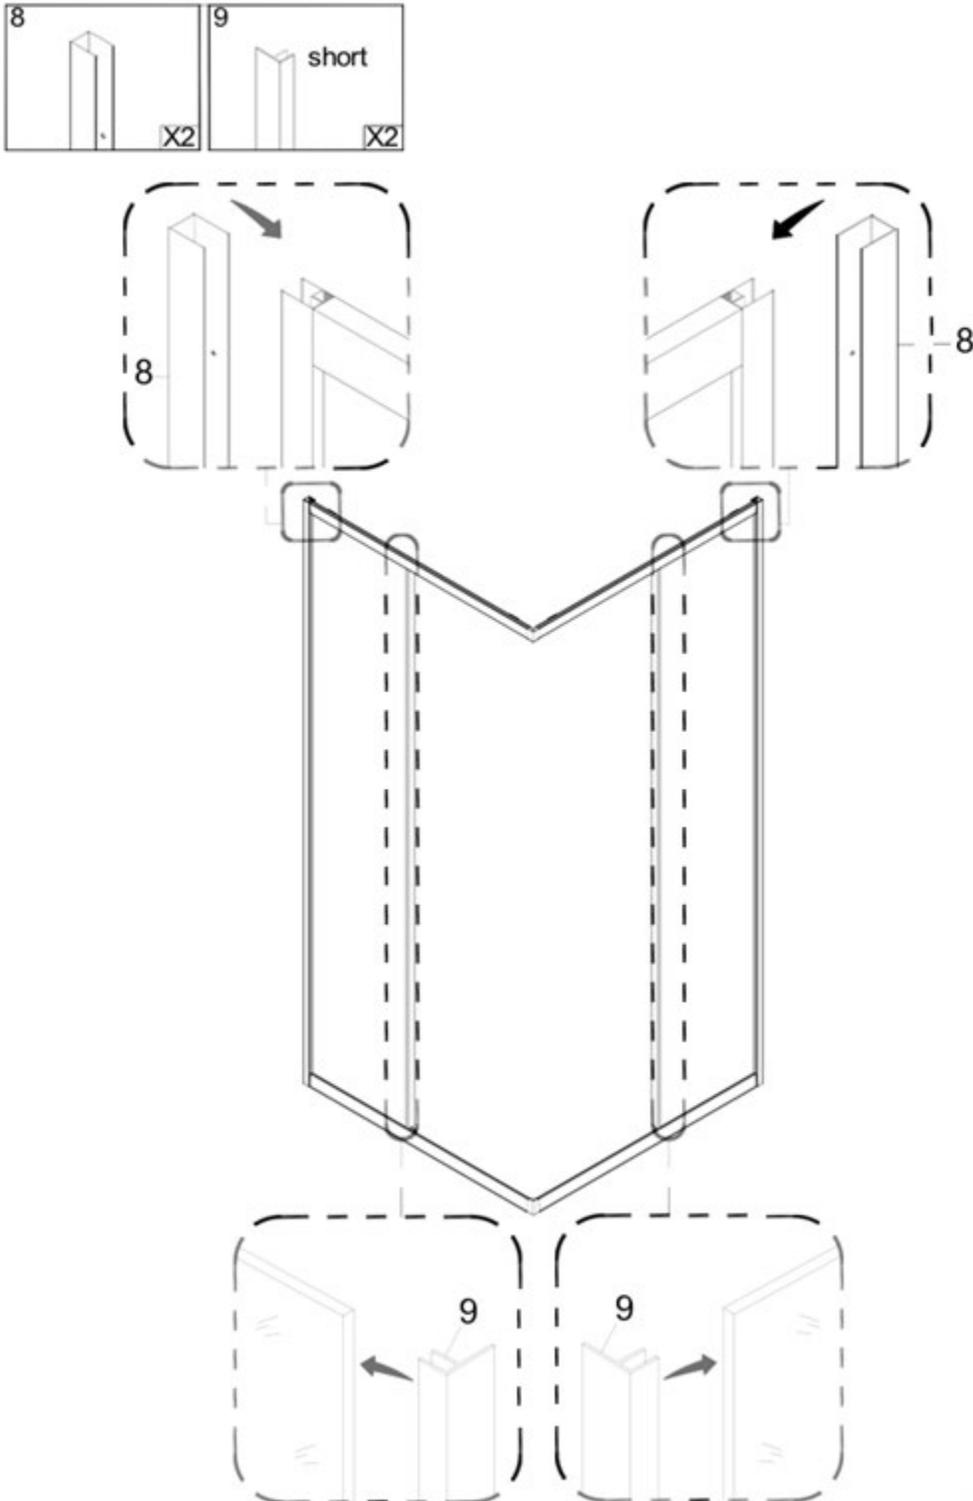


5. Prepare the door (13) for installation. Install the top rollers (14), bottom rollers (15) and handles (19).

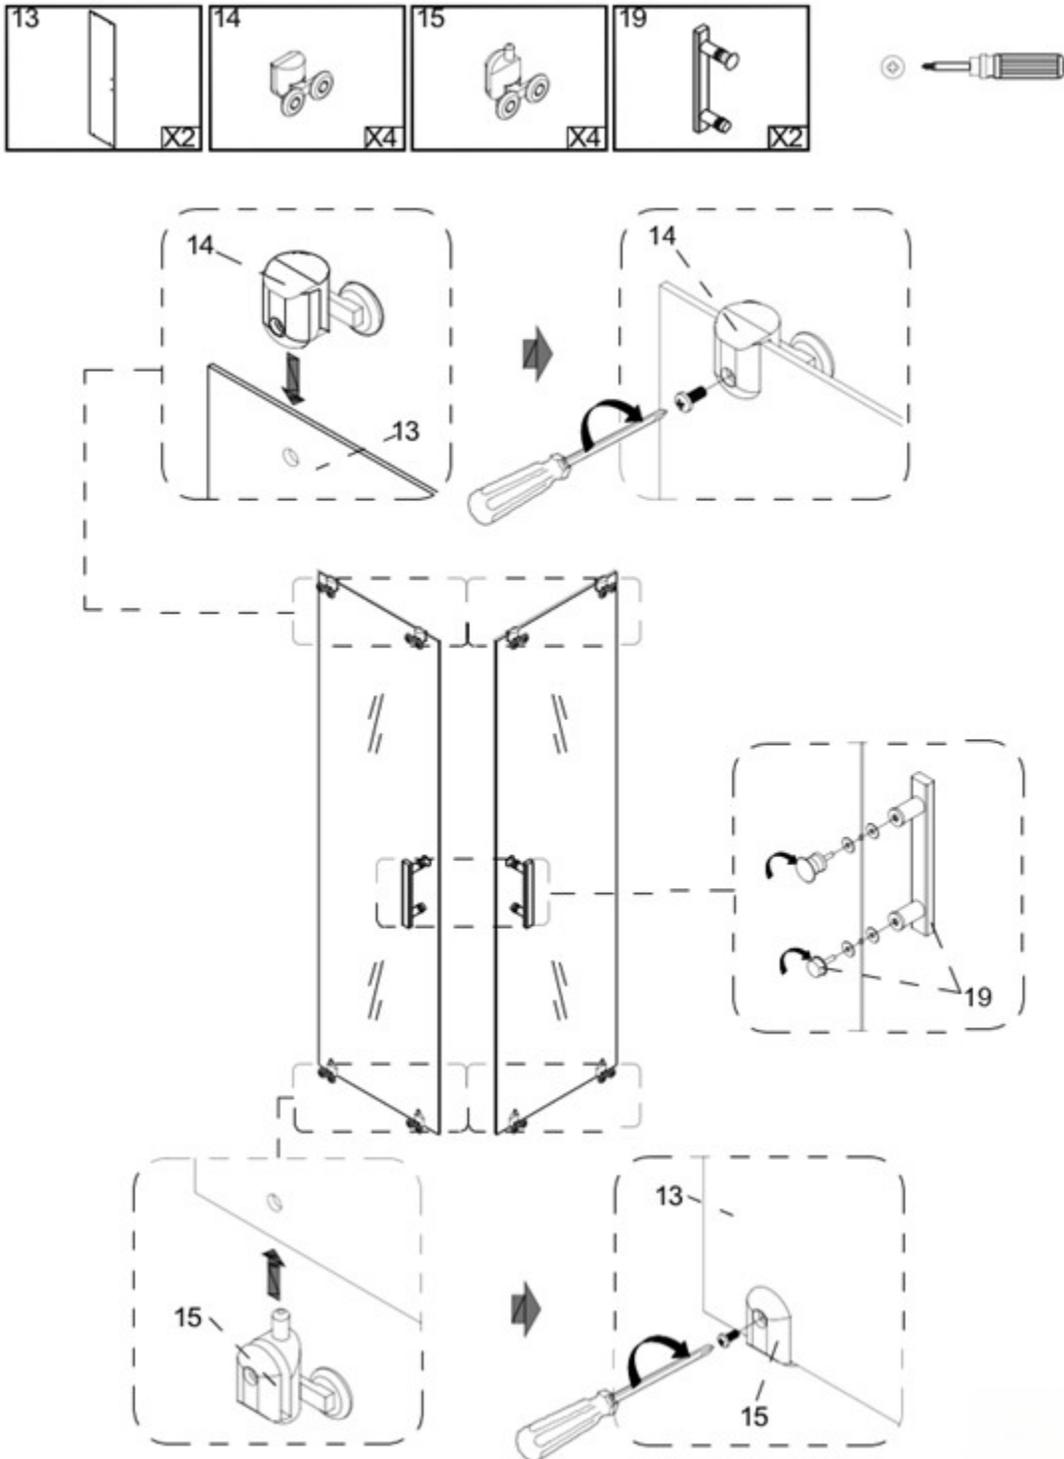



6. Install the door on the rails in the shower enclosure, starting with placing the top rollers (14) in the top guides (2) and then attaching the bottom rollers (15) in the bottom guides (2). The bottom rollers are attached to springs, which allows them to be installed in the guides.



- Fit the magnetic strips (18) to the door so that the door closes magnetically. Adjust the height of the upper rollers (14) as needed so that the upper edge of the door is aligned. Attach the seals (16) to the strips securing the enclosure to the wall. Attach the edges (17) to the door (13).

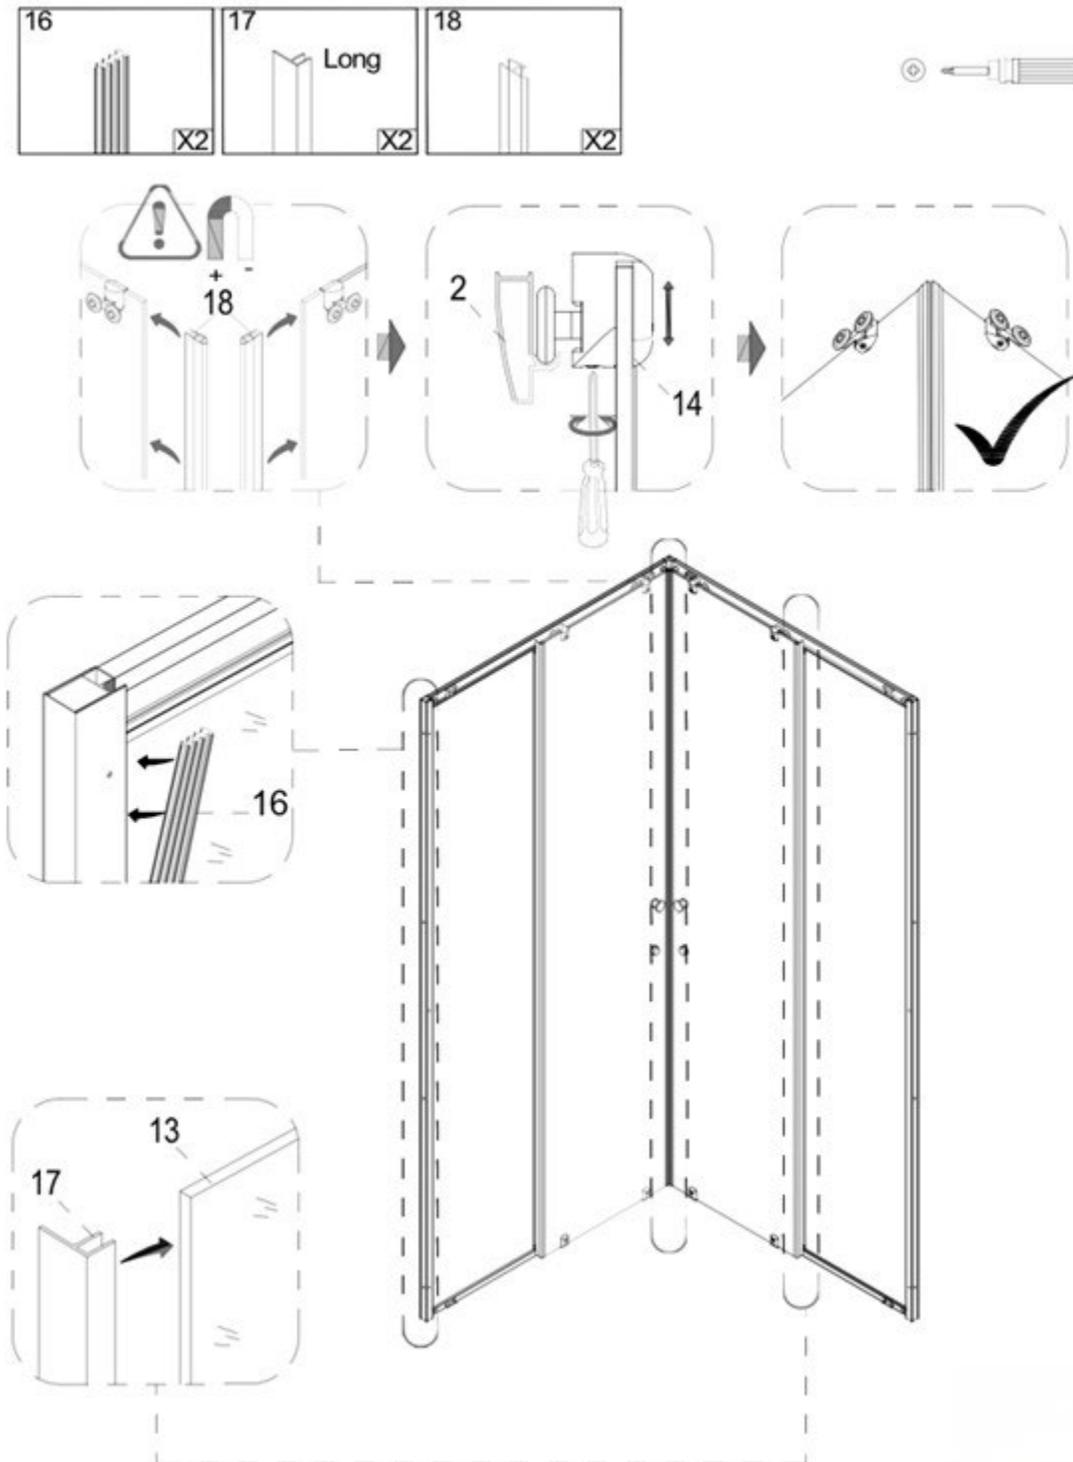

8. Secure the cabin to the strips on the wall using screws (5) with caps (12).

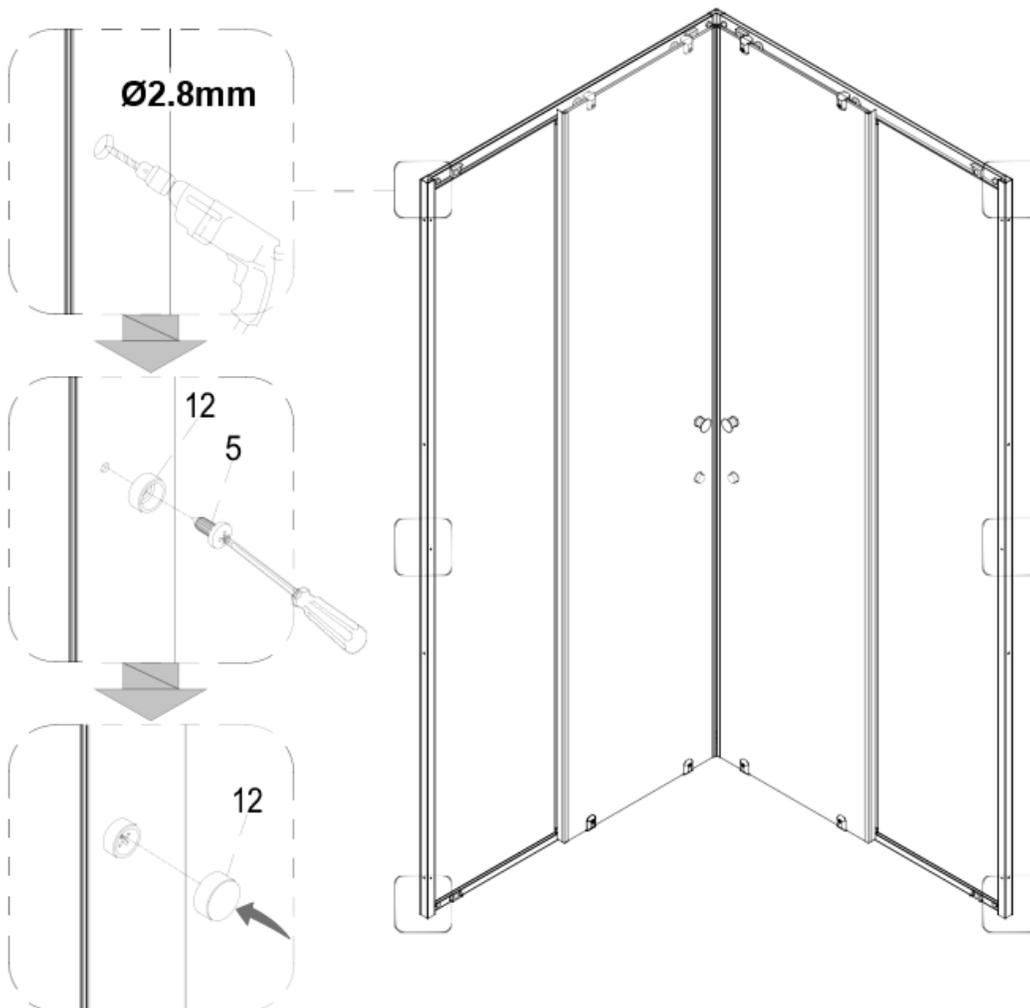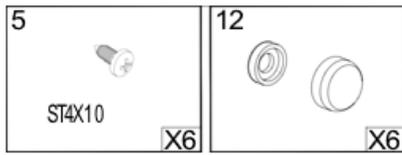

9. Seal the edges with silicone. Leave to dry for at least 24 hours.

