


INSTALLATION INSTRUCTIONS


SHOWER ENCLOSURE

A2

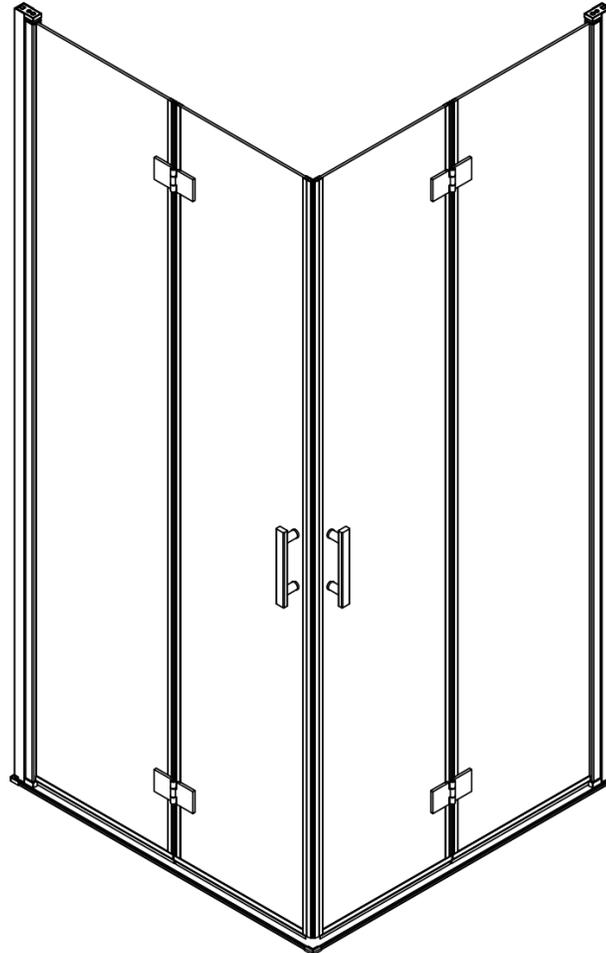


Recommended installation by two persons


Illustrative drawing (exploded view):

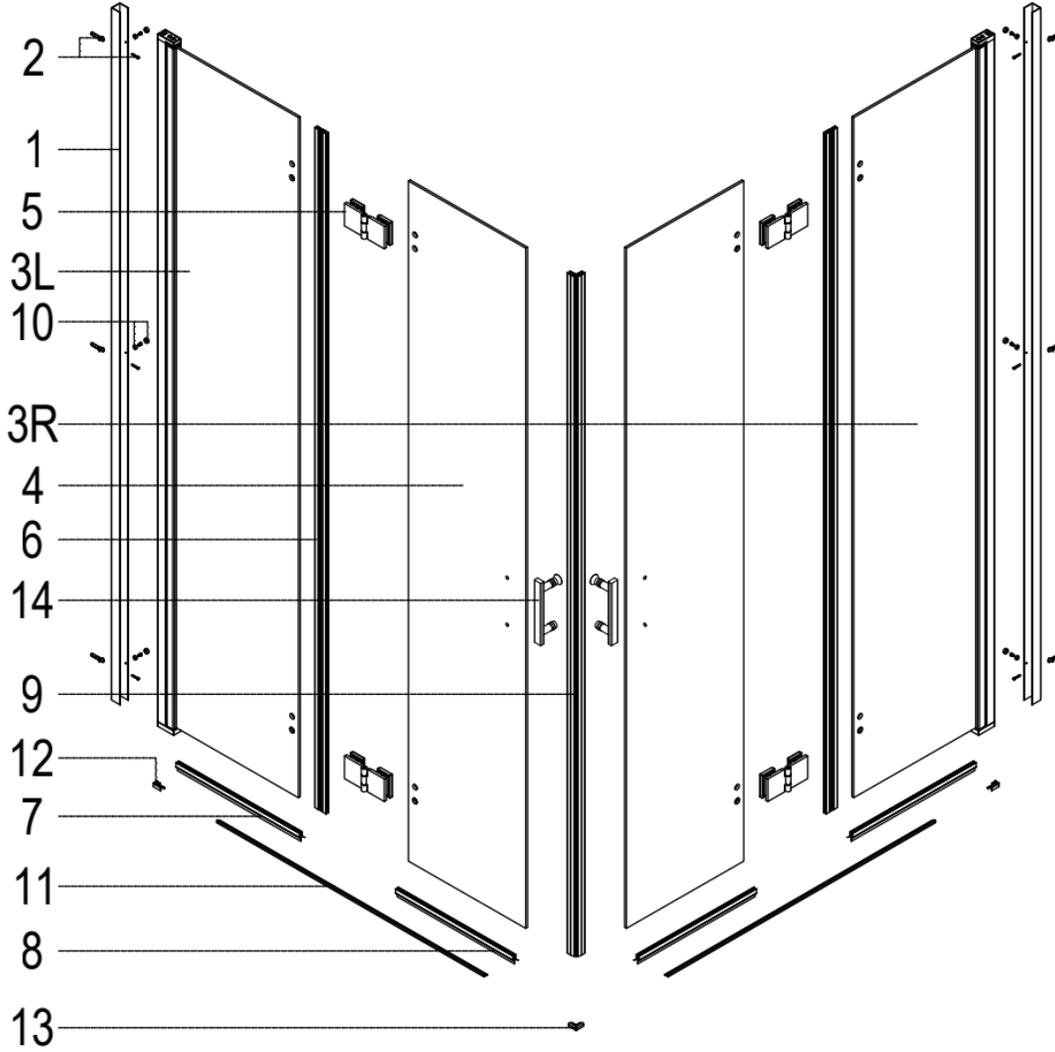


Required tools:

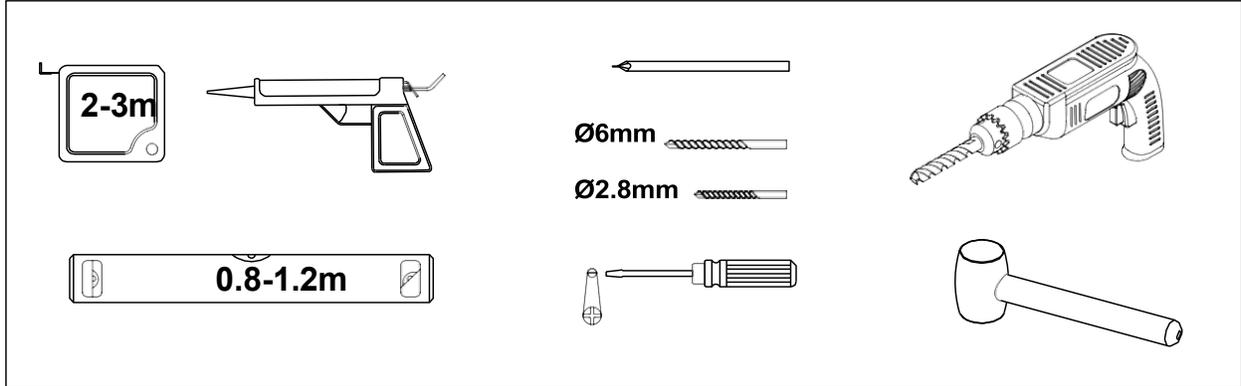



List of components:

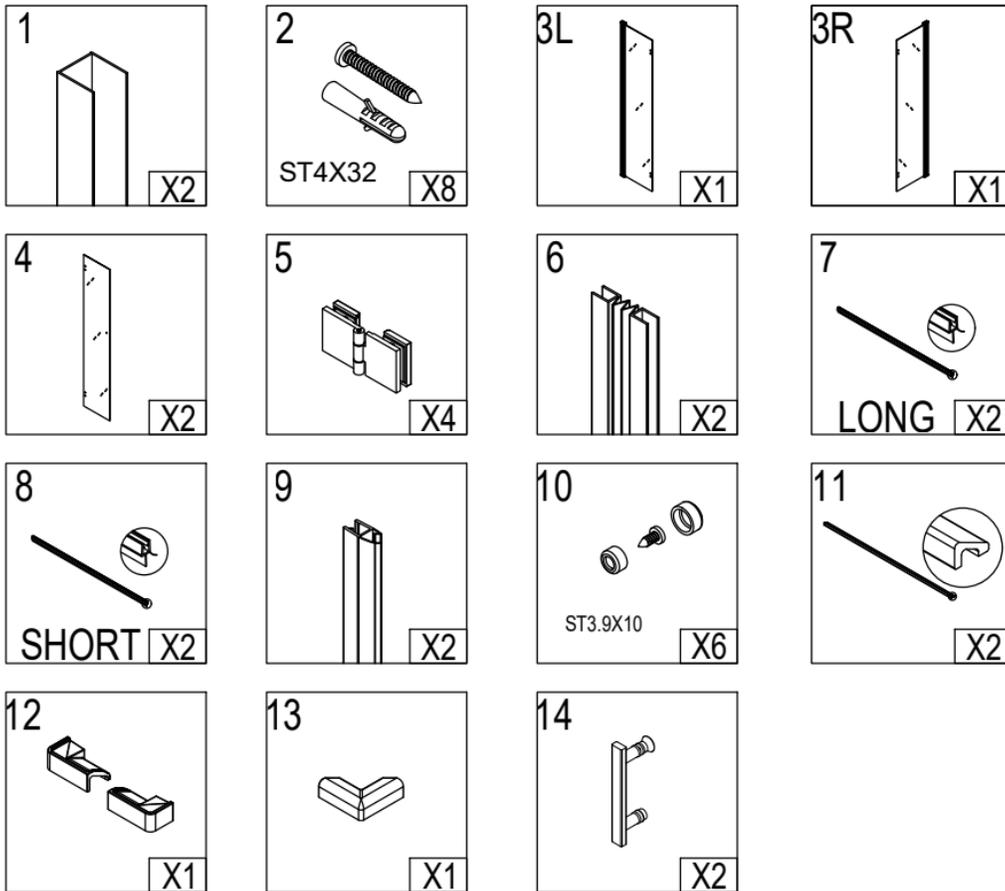



1. Measure the distances for fixing the vertical slats (1), level them, drill holes for the dowels (2) and fix the slats to the wall using the screws provided.

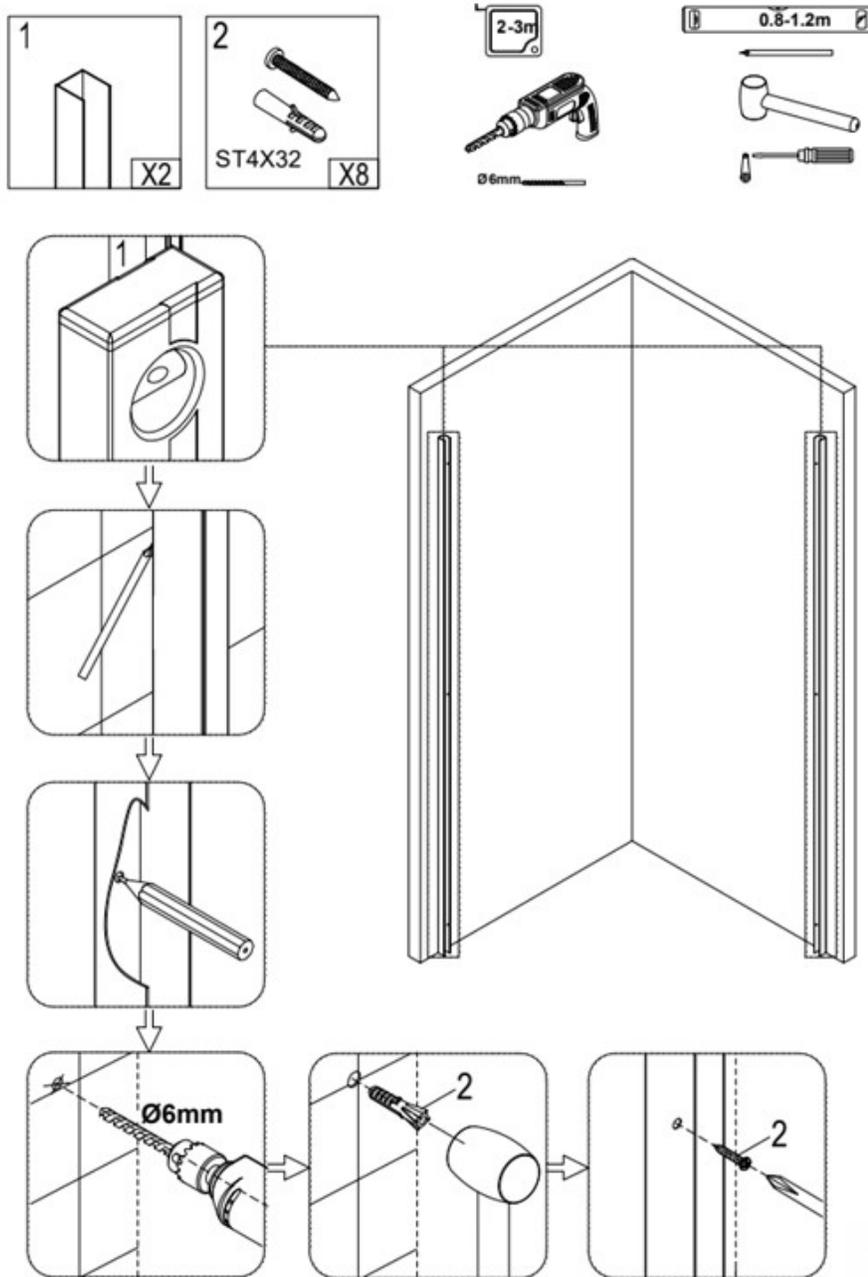








- Prepare the left side panel (3L). Attach the hinges (5) and the bottom seal (7) to it, attach the door (4) and fit the bottom seal (8) to it. Fit the seal (6) between the door (4) and the side panel (3L). Fit the seal (9) to the door.

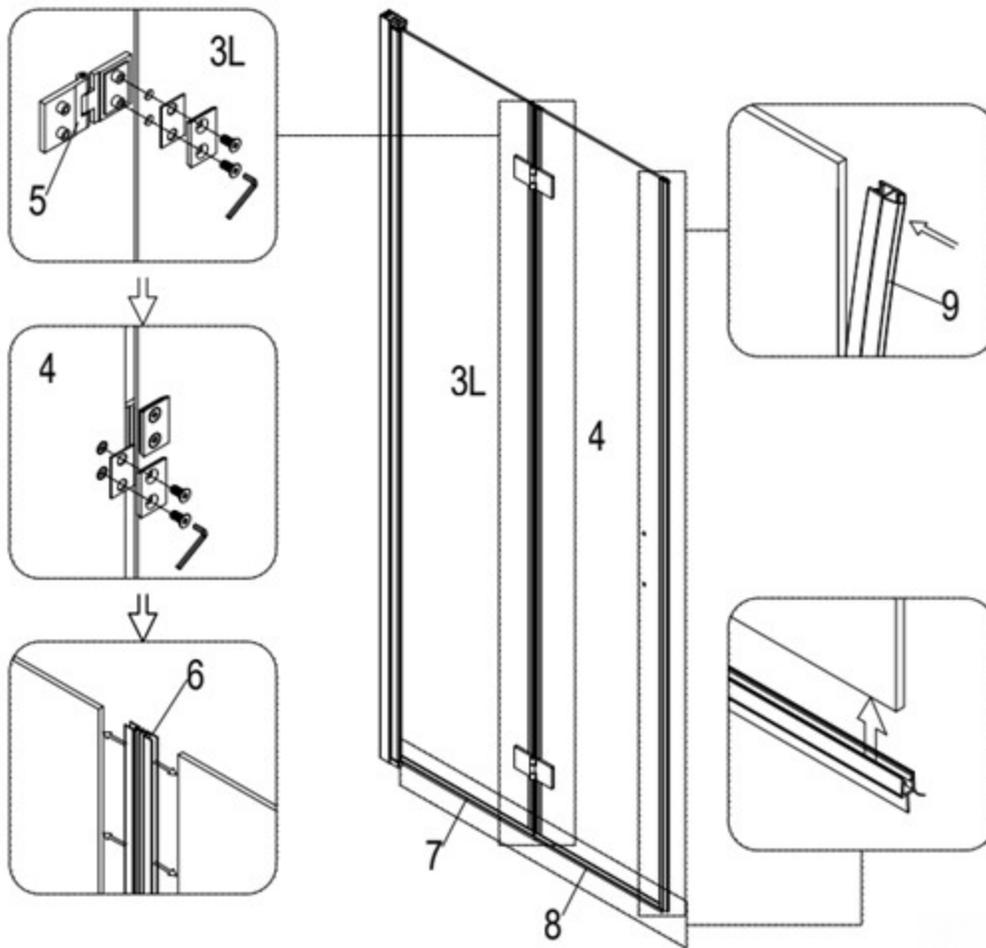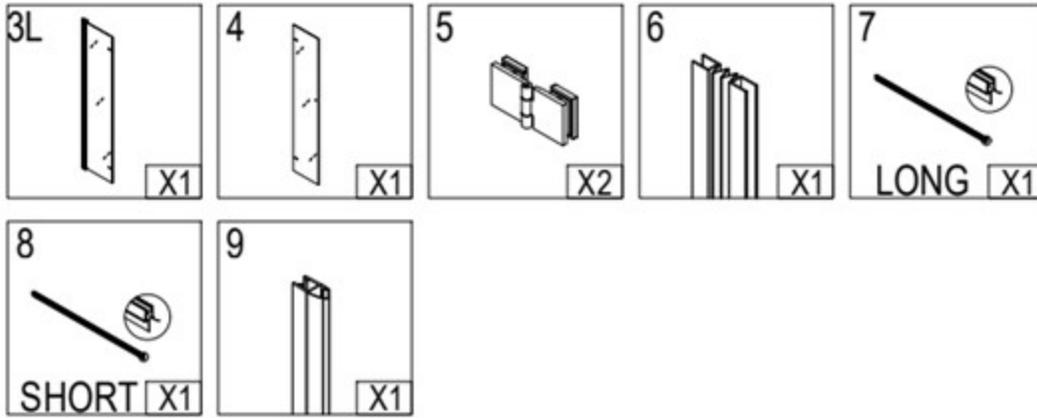








- Prepare the right side panel (3R). Attach the hinges (5) and the bottom seal (7) to it, attach the door (4) and fit the bottom seal (8) to it. Fit the seal (6) between the door (4) and the side panel (3L). Fit the seal (9) to the door.

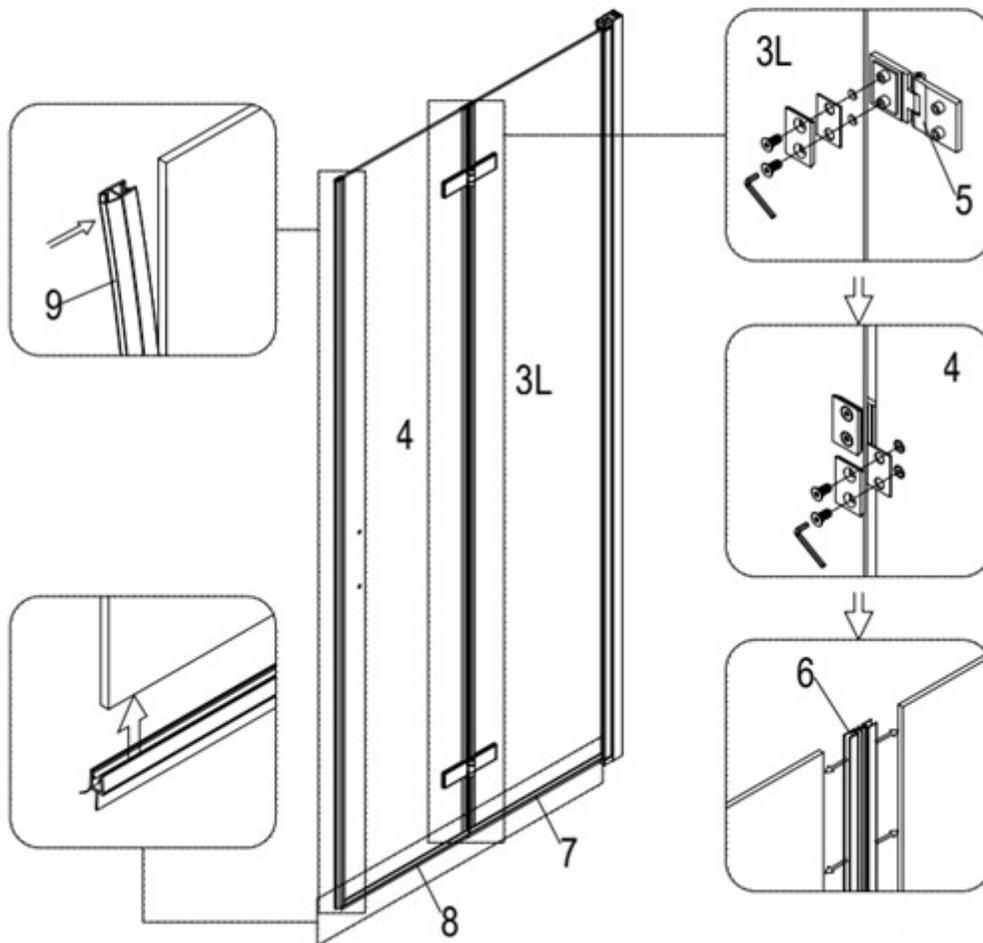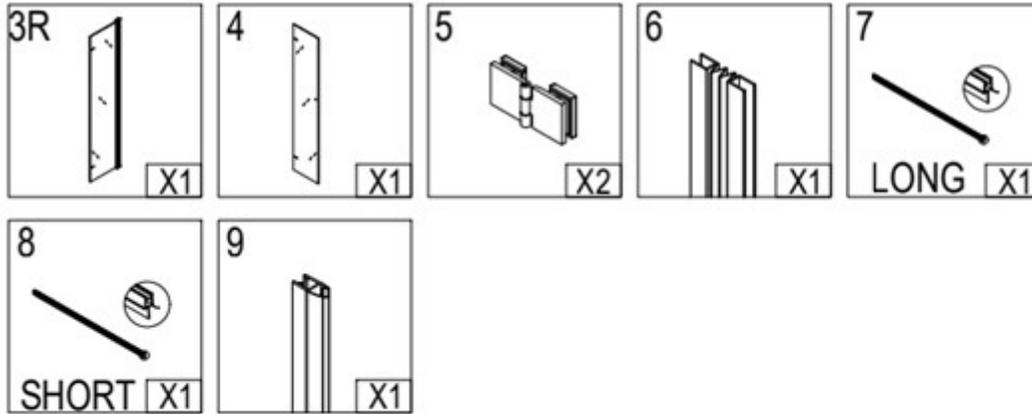

4. Attach the walls (3L and 3P) to the vertical slats (1) using screws with caps (10).

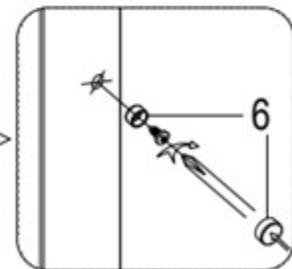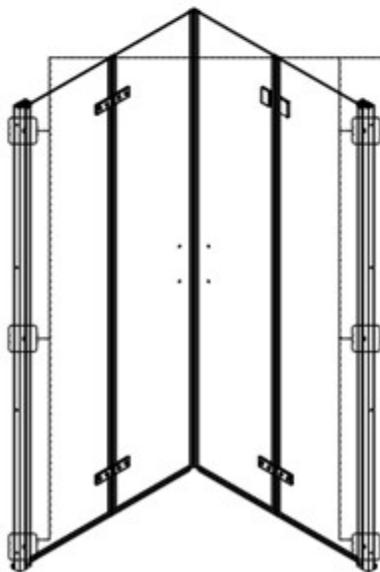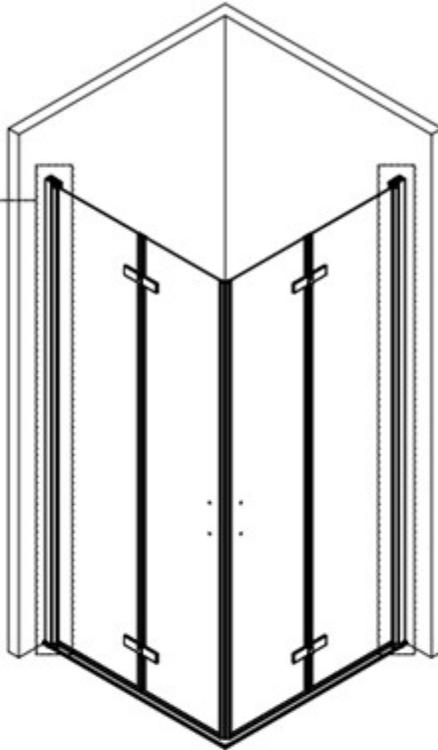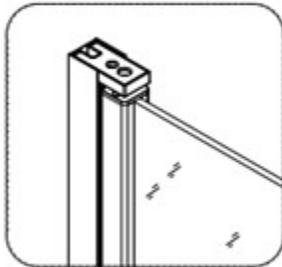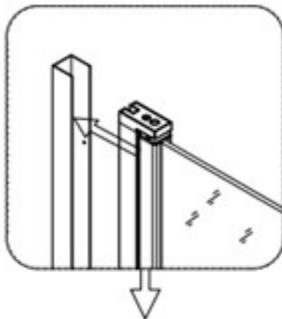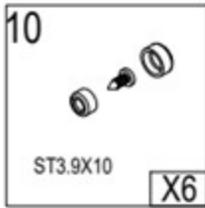

5. Fit the handles (14) to the door. Fix the threshold strips (11) with silicone, fit the caps (12) at the ends of the strips and the corner piece (13) in the middle.

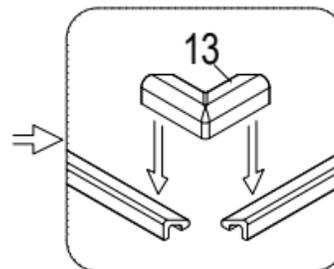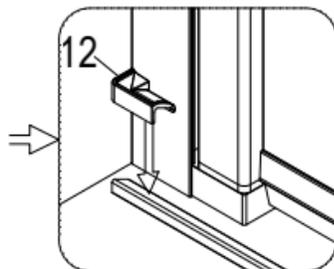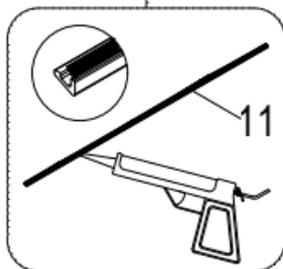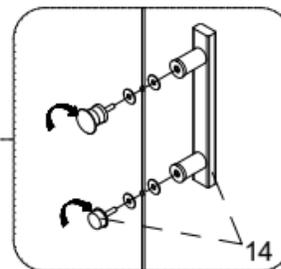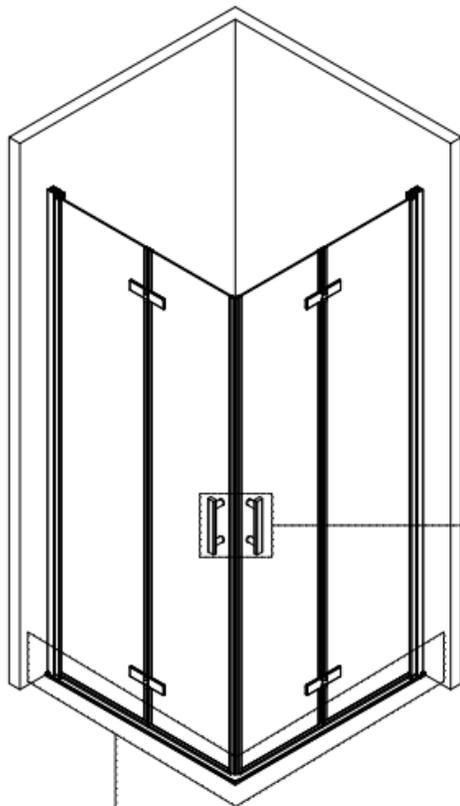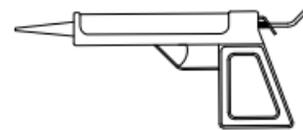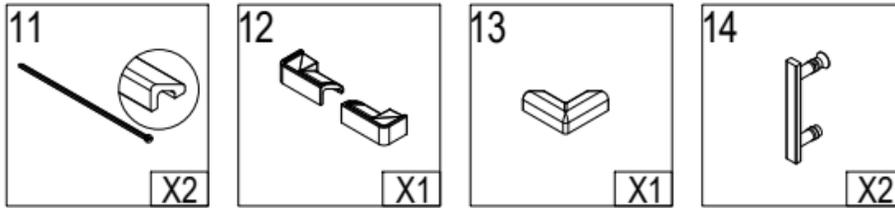

6. Seal the edges with silicone. Leave to dry for at least 24 hours.

