


TECHGLOBE Sp. z o.o.
Kolejowa 12, 23-200 Kraśnik, Poland
Tax ID: PL9462697129
+48 510 510 945




www.techglobe.pl

INSTALLATION INSTRUCTIONS SHOWER ENCLOSURE


A3-2

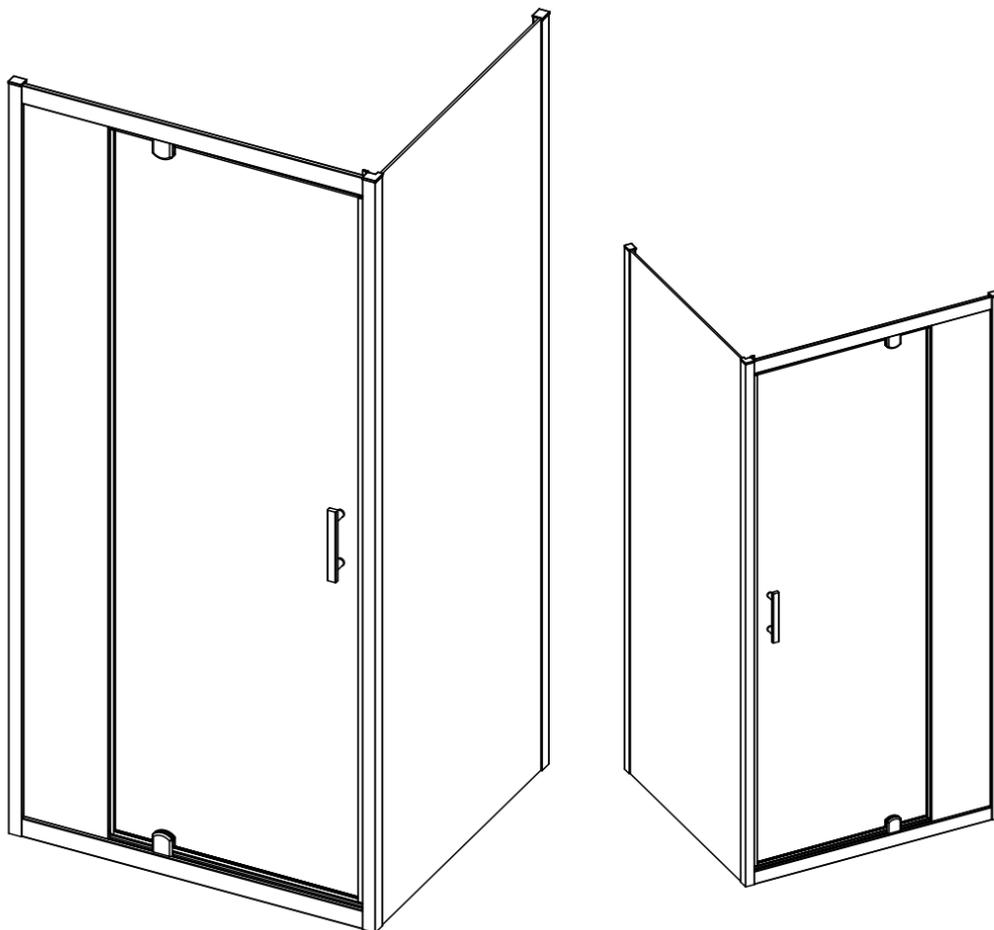


Illustrative drawing (exploded view):

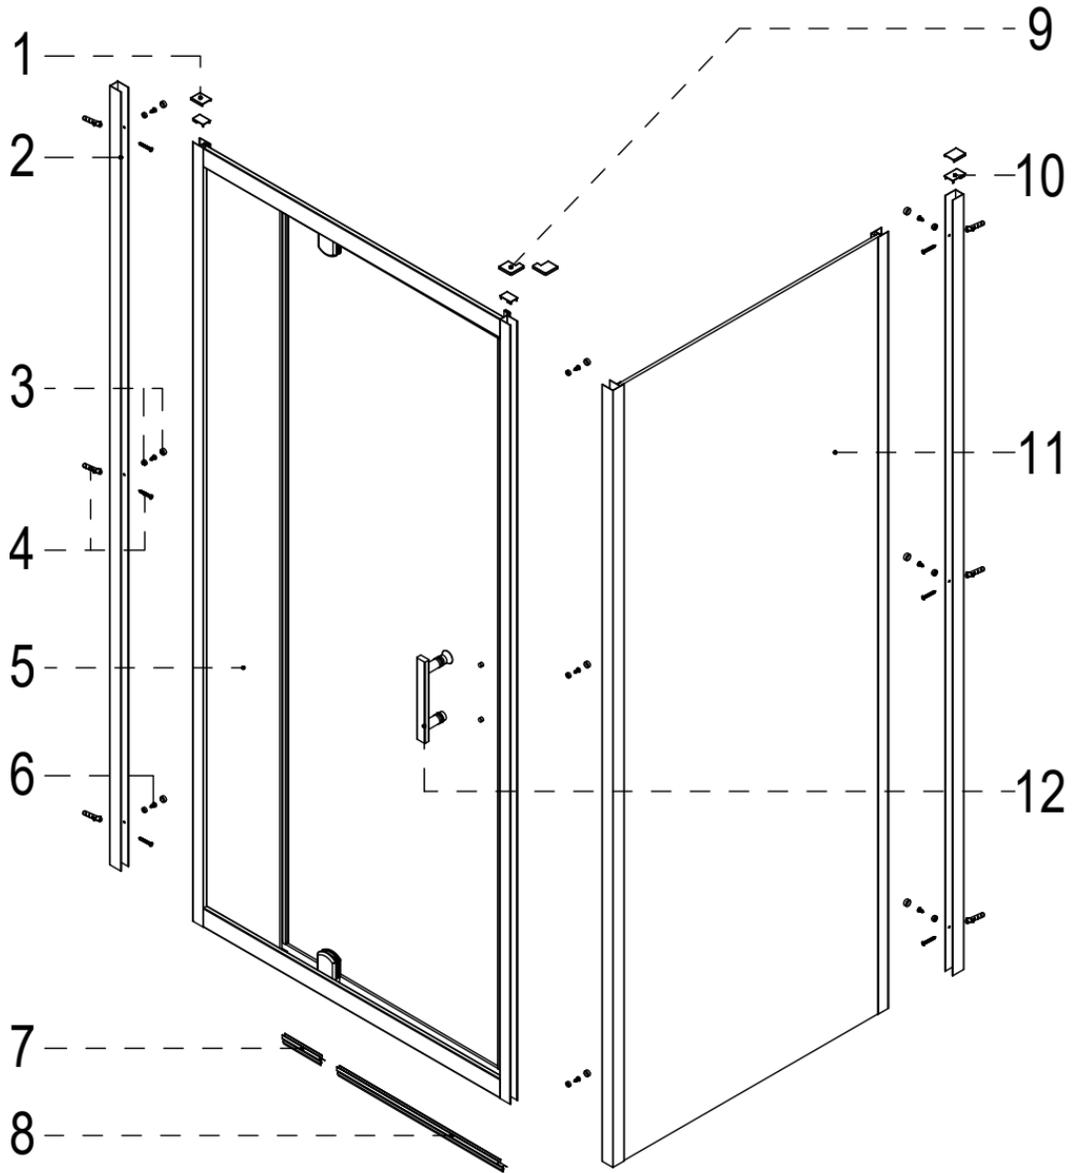


Required tools:

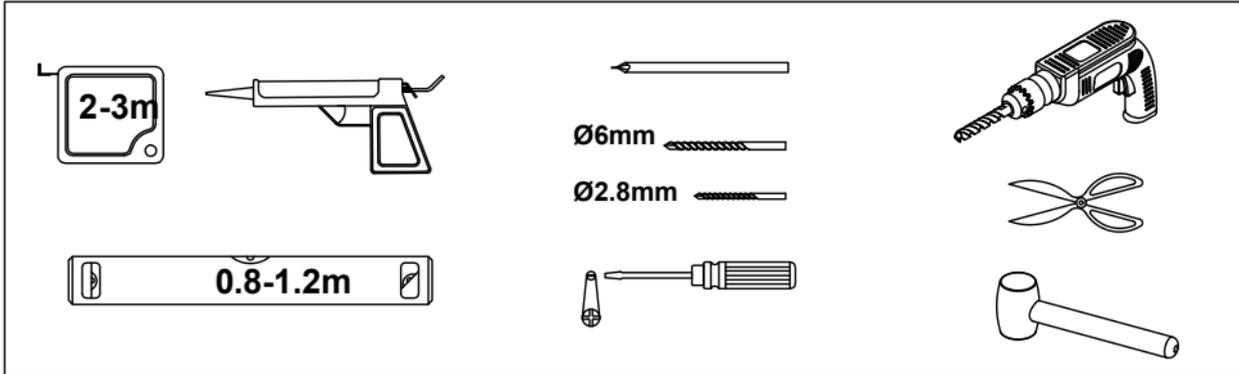





List of components:

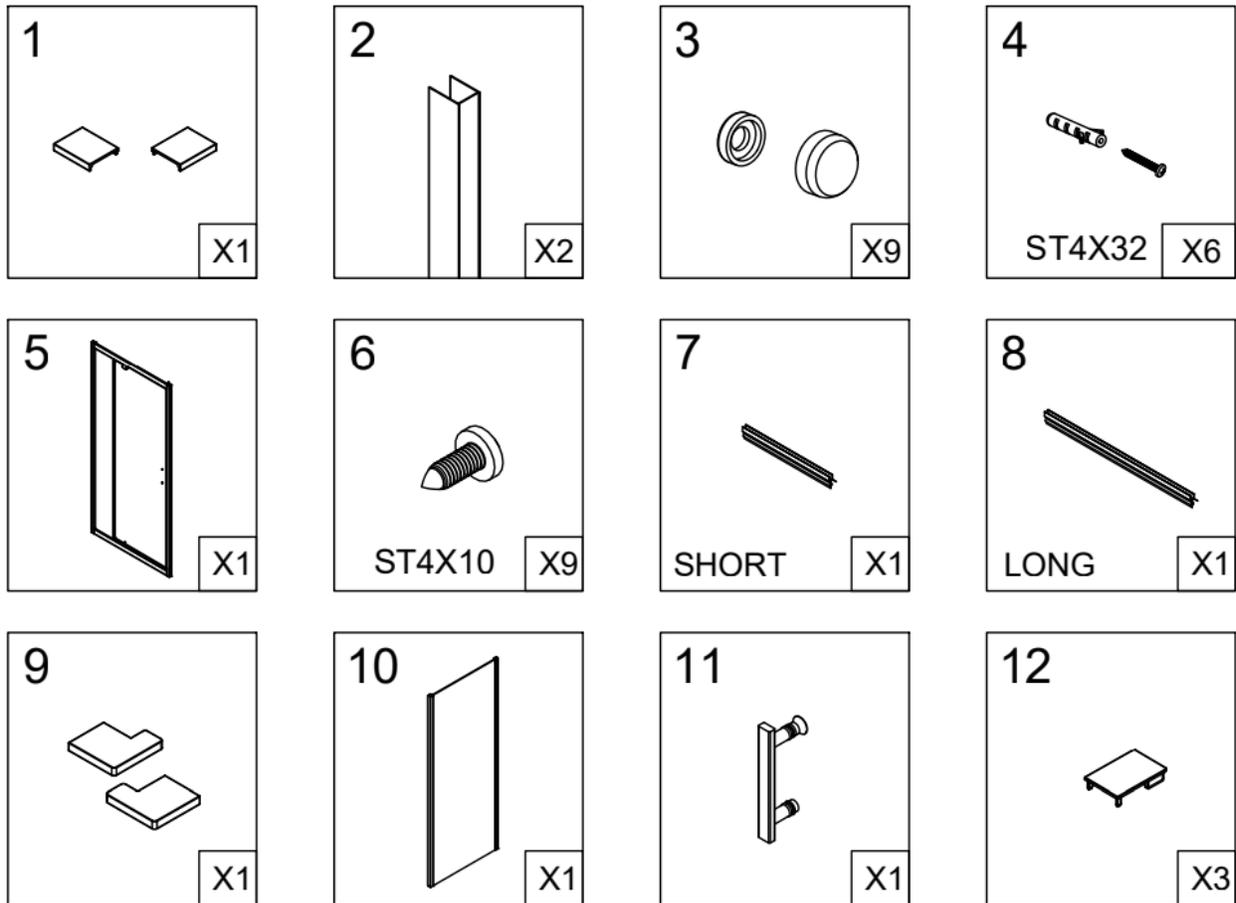





1. Measure the distances for mounting the vertical slats (2). **The holes for mounting the enclosure are approximately 20-25 mm closer than the nominal dimensions of the enclosure (e.g. for a 90 cm x 100 cm enclosure, the mounting holes will be approximately 88 cm x 98 cm from the corner of the wall). Check the length of the shower enclosure walls and transfer the dimensions to the wall in such a way as to maintain right angles and a rectangular shape.** Level the slats, drill holes for the dowels (4) and fix the slats to the wall using the screws provided. Connect the side walls (5 and 10) and then connect the whole structure to the slats (2).

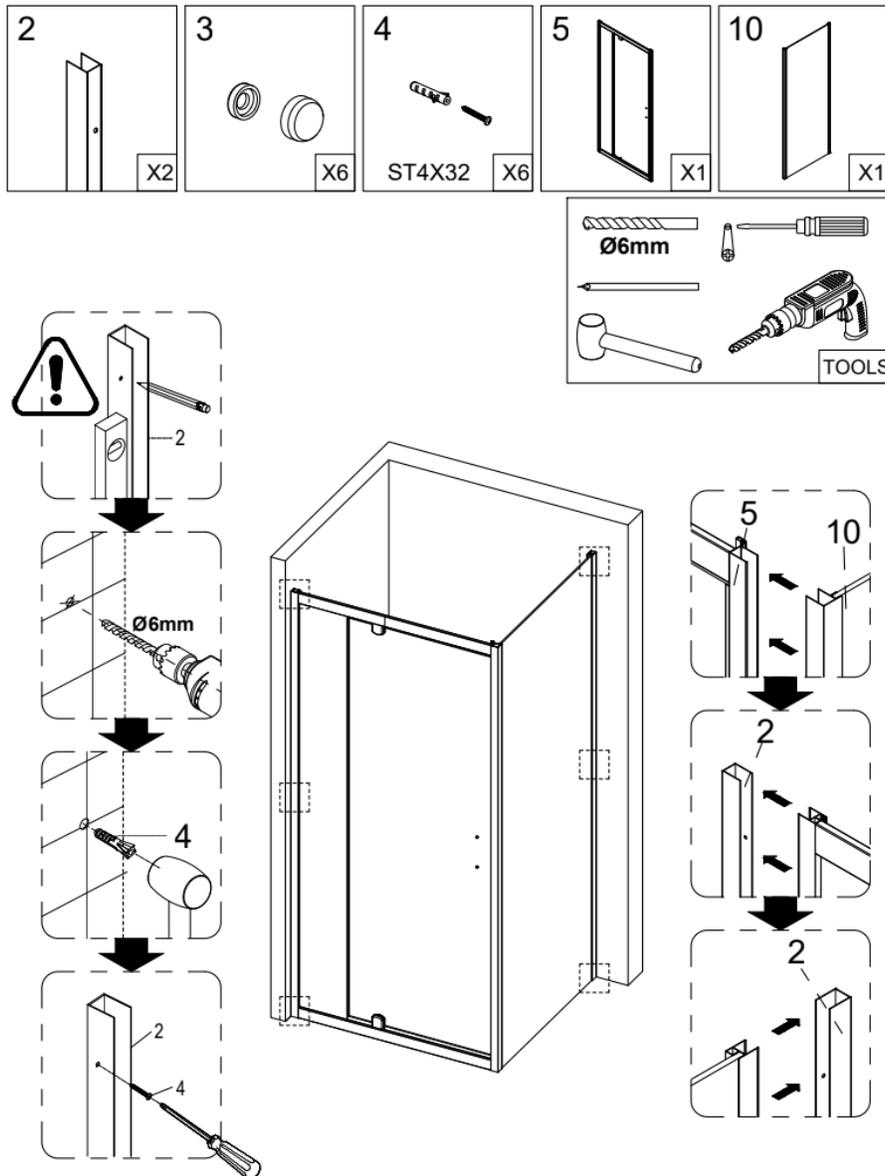



2. Connect the side walls (5 and 10) to the slats (2) using screws (6) with caps (3). Attach the handles (11) to the door (5).

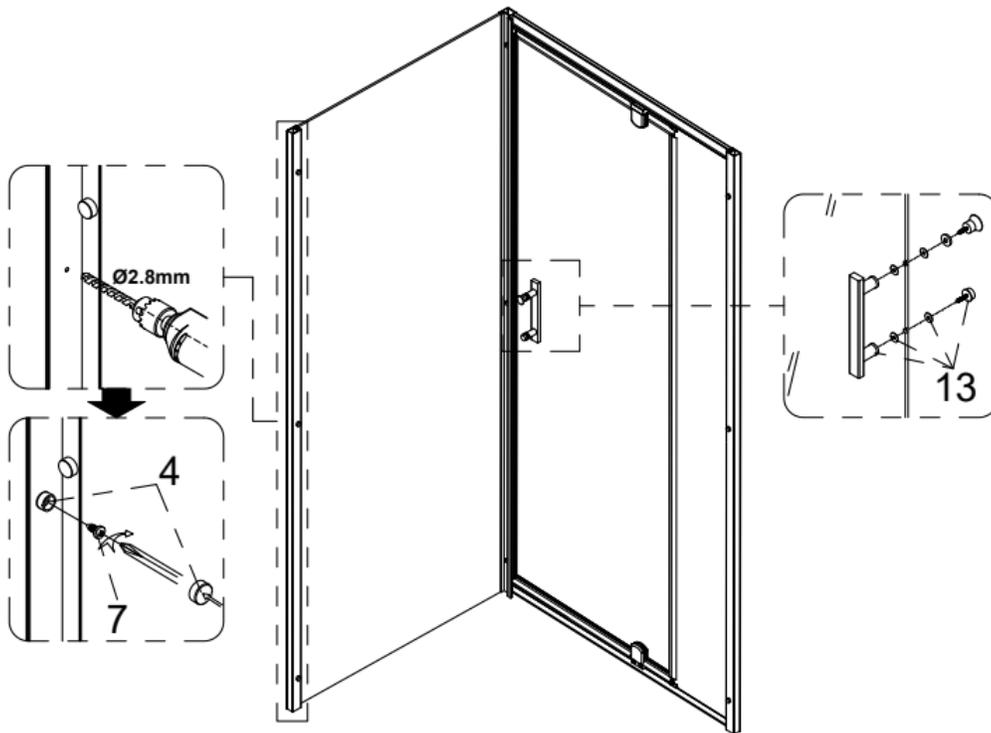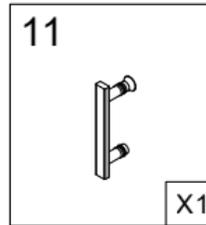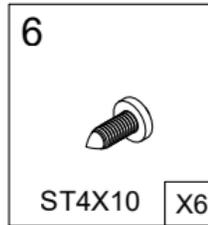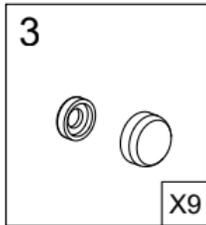

3. Fit the caps (1, 9 and 12).

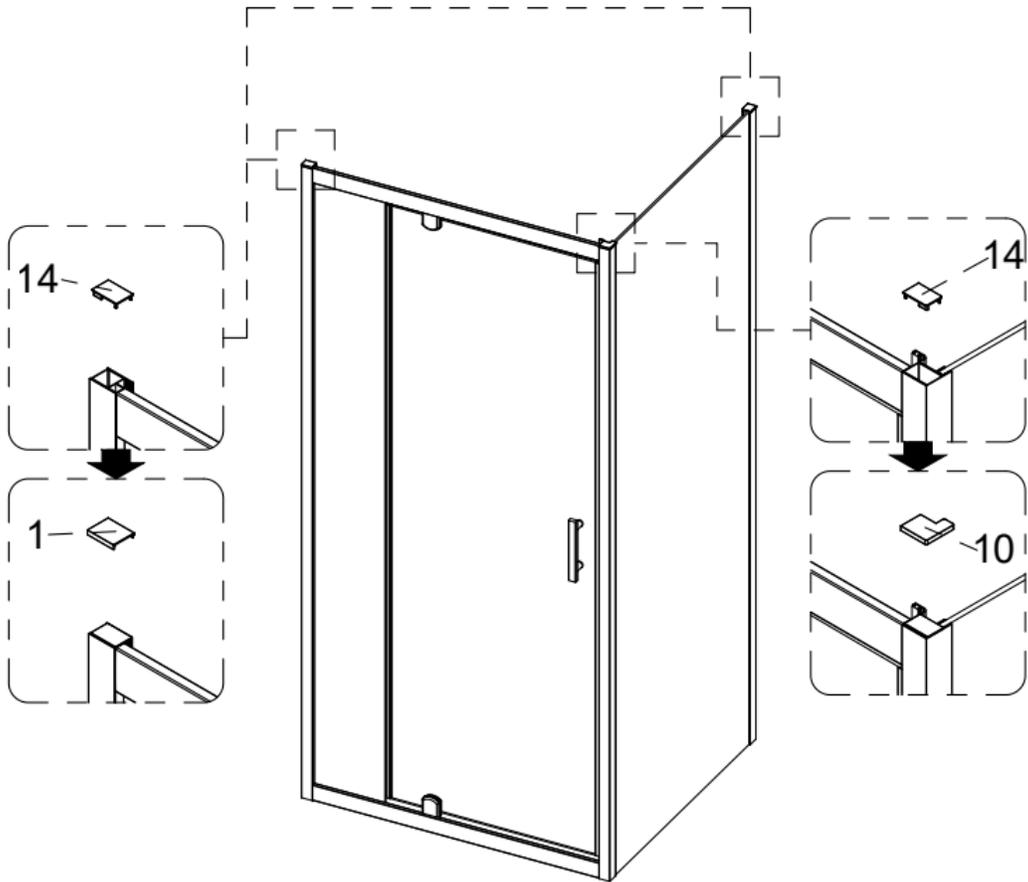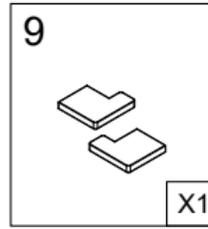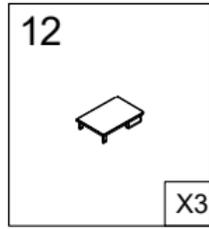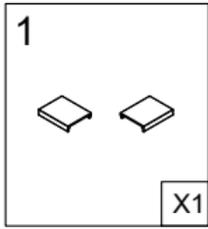

4. Cut and attach the seals (7, 8).

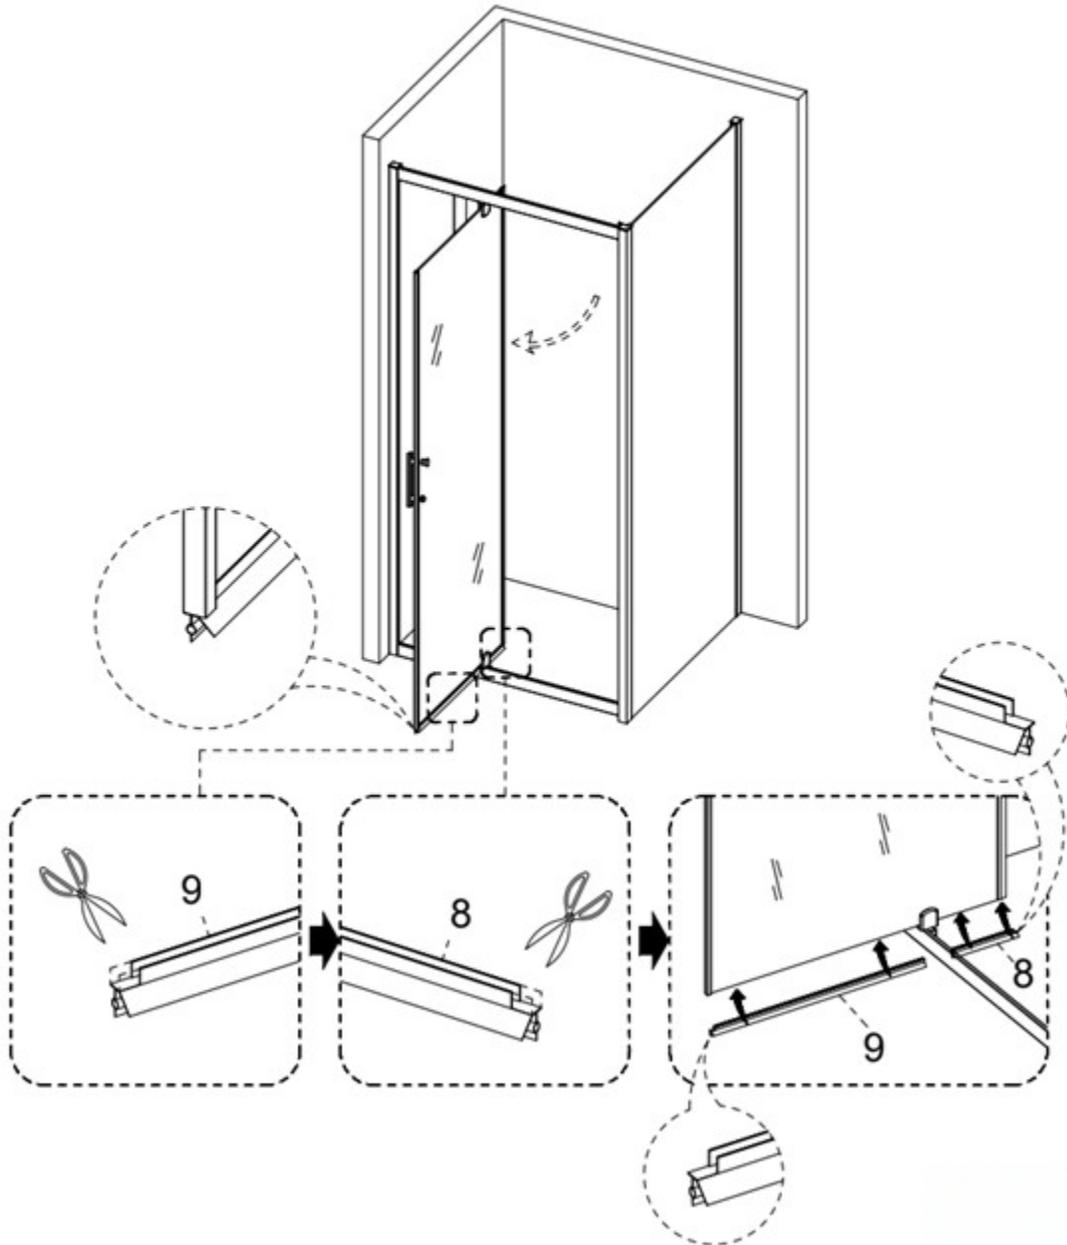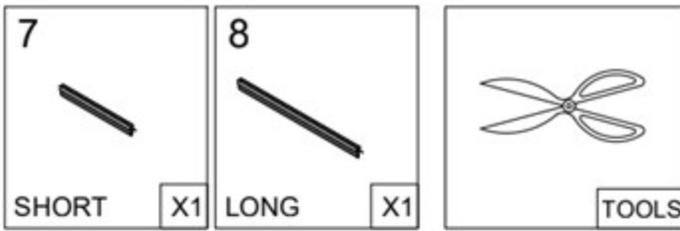

5. Seal the edges with silicone. Leave to dry for at least 24 hours.

