

TECHGLOBE Sp. z o.o.

Kolejowa 12, 23-200 Kraśnik, Poland

Tax Identification Number (NIP): PL9462697129


+48 510 510 945



www.techglobe.pl


INSTALLATION INSTRUCTIONS SHOWER ENCLOSURE

A5

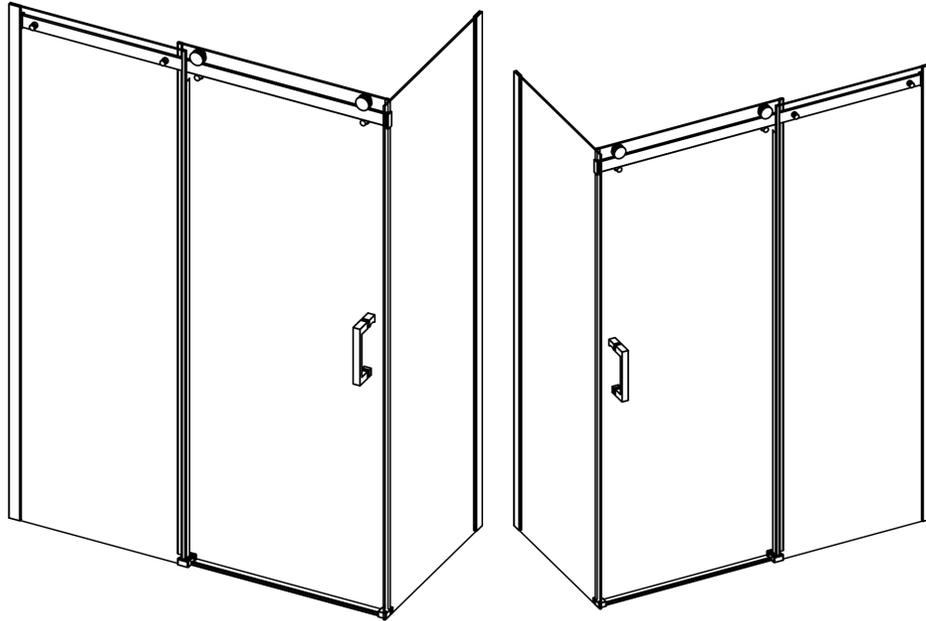


Recommended installation by 2 persons




Illustrative drawing (exploded view):

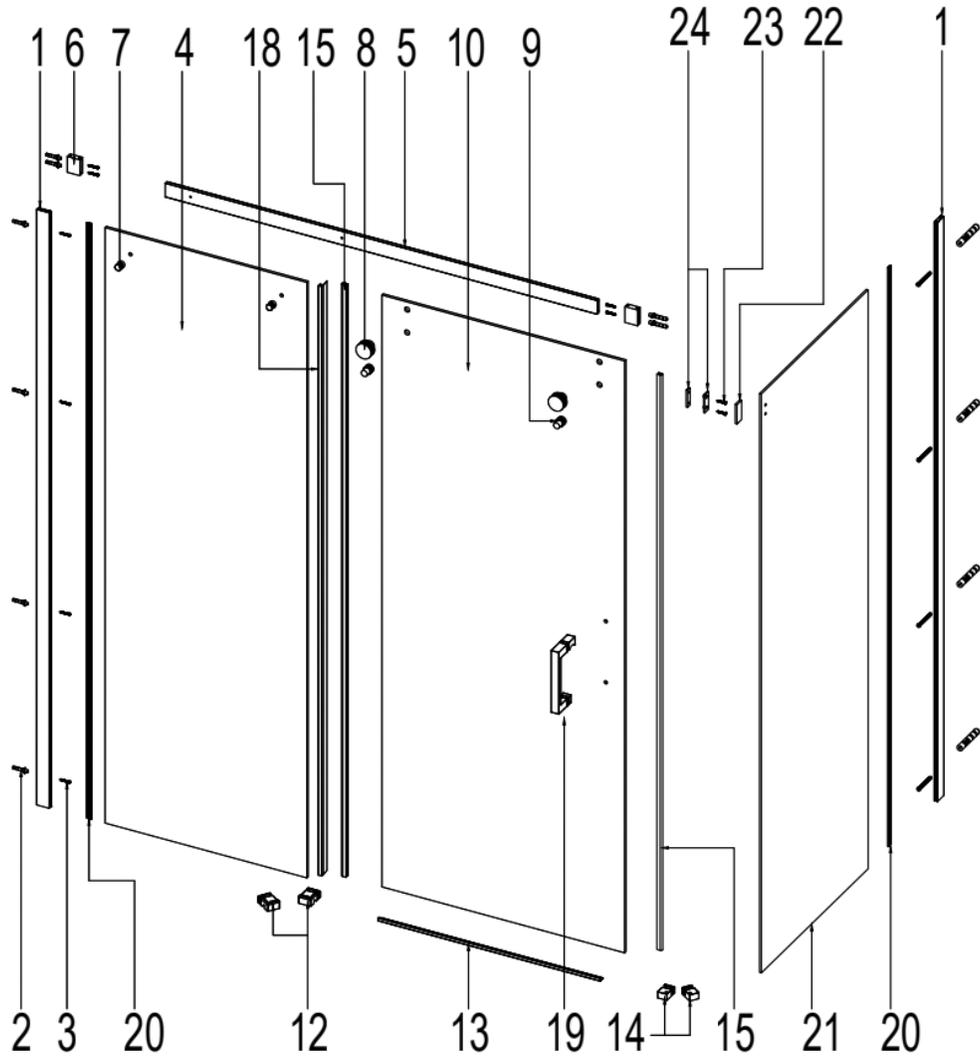


Required tools:

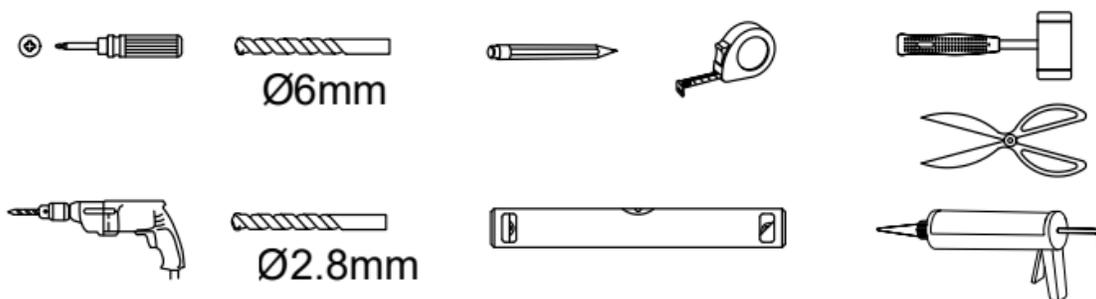




List of components:

1  X1	2  X14	3  ST4X32 X14	4  X1	5  X1
6  X2	7  X2	8  X2	9  X2	10  X1
11  X1	12  X1	13  X1	14  X1	15  X1
16  X1	17  X1	18  X1	19  X1	20  X1
21  X1	22  X1	23  ST4X25 X2	24  X1	



1. Measure the distances for mounting the vertical slats (1). **The holes for mounting the enclosure are approximately 20-25 mm closer than the nominal dimensions of the enclosure (e.g. for a 90 cm x 100 cm enclosure, the mounting holes will be approximately 88 cm x 98 cm from the corner of the wall). Check the length of the shower enclosure walls and transfer the dimensions to the wall so that the right angles and rectangular shape are maintained.** Position the slats vertically, drill holes for the dowels (2) and fix the slats to the wall using the screws provided (3).

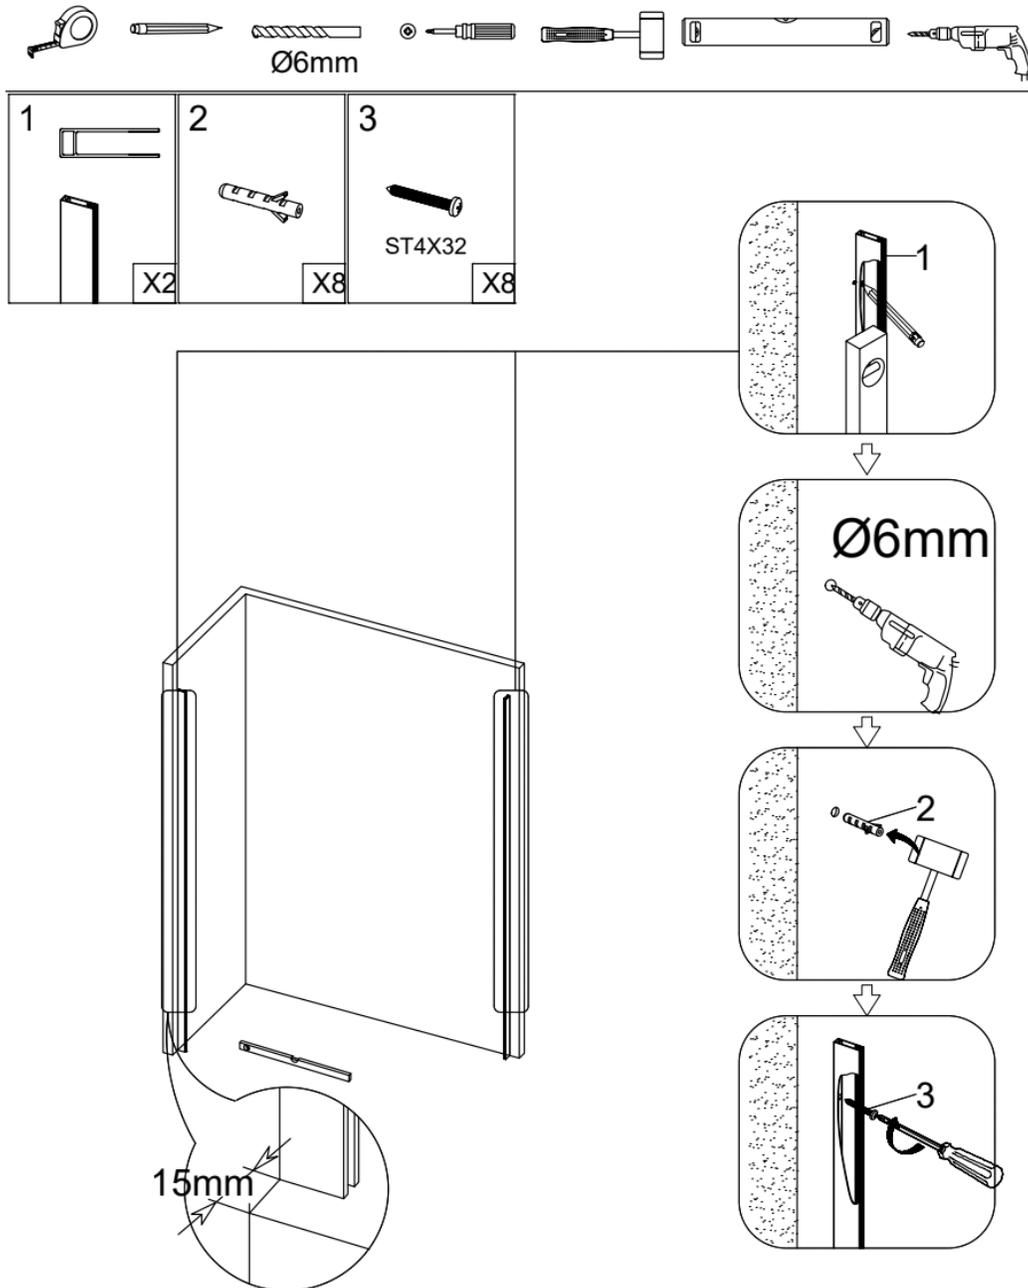



2. Attach the side walls (4, 21) to the slats (1) and fix the seals (20). (from the inside?)

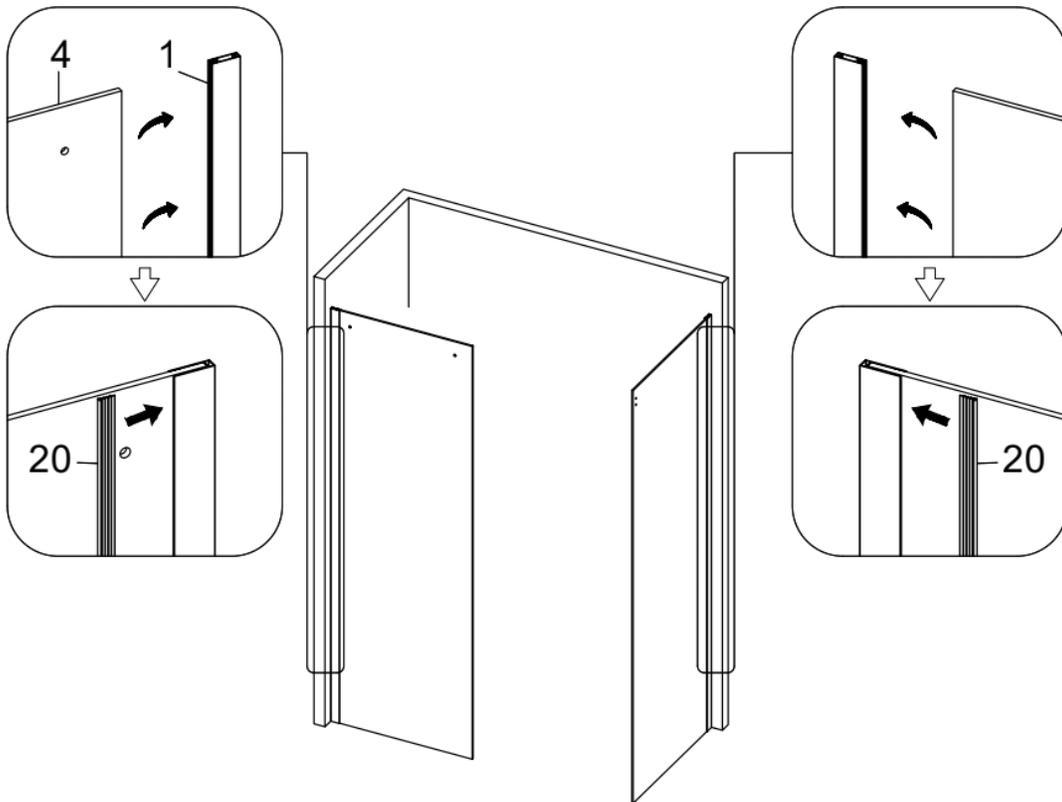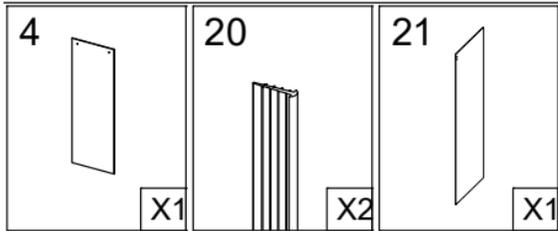



3. Attach the guide rail (5) to the wall (4) using screws with caps (7). Attach the guide rail (5) to the wall (21) using screws (23) with spacers (24). Set the guide horizontally. Measure the points for the guide mounting bracket (6) to the wall. Remove the guide. Screw the bracket (6) to the wall using dowels (2) with screws (3). Replace the guide. Replace the cap (22).

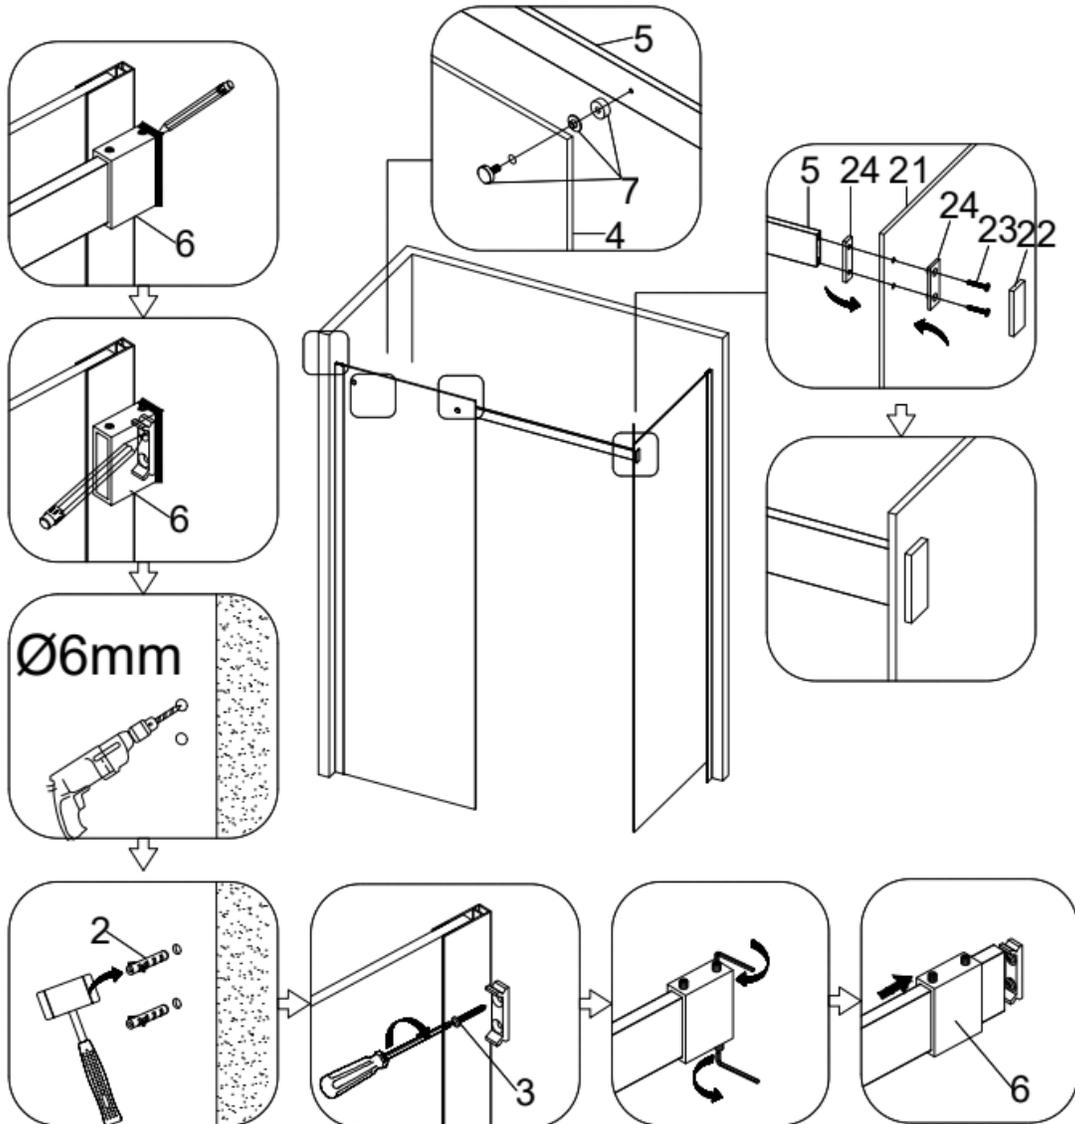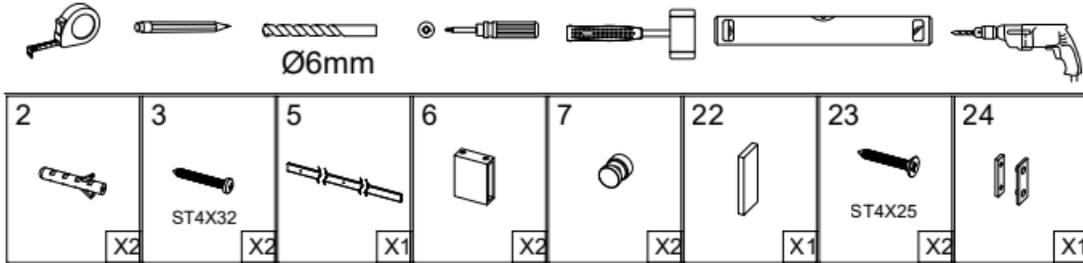


4. Fit the main rollers (8) to the door (10). Mount the door (10) on the guide (5). Fit the auxiliary rollers (9). Mount the handle (19) to the door (10).

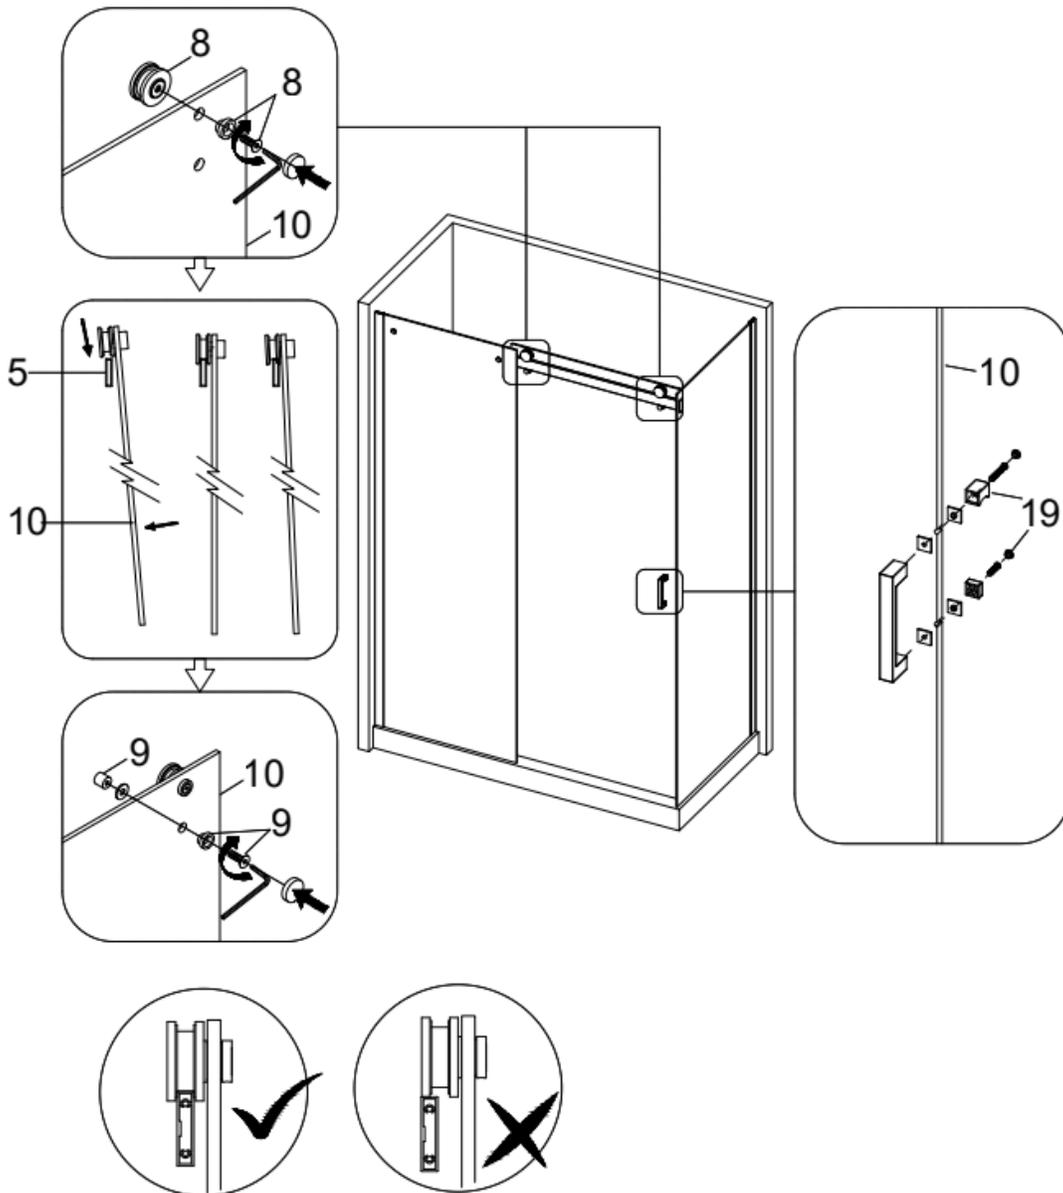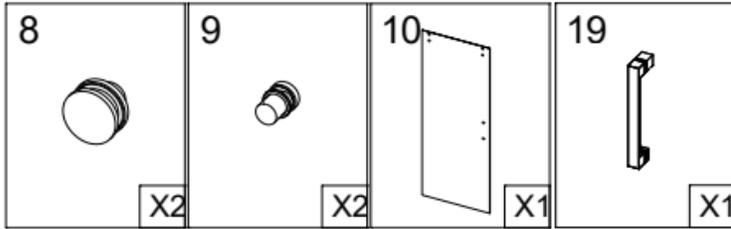

5. Attach the lower door guides (12, 14) together with the threshold (13).

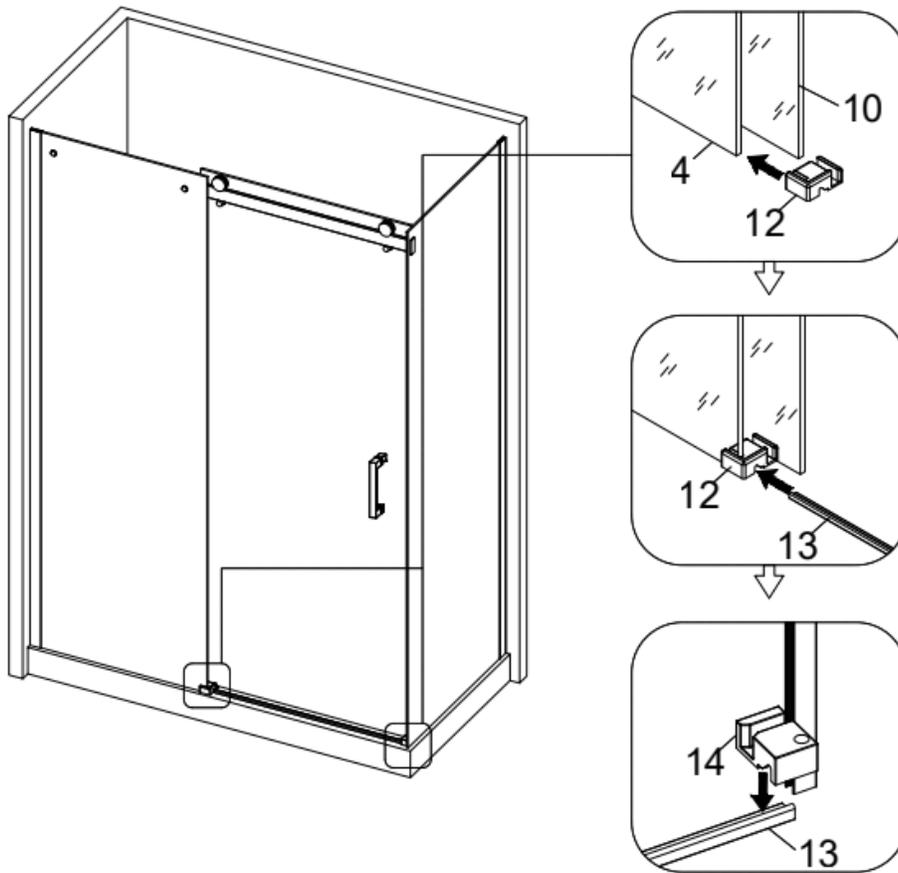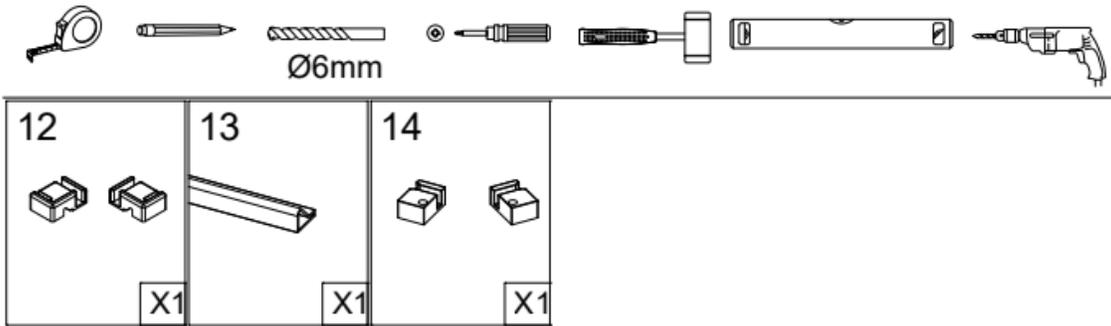

6. Fit the seals (15) to the door (10). Cut the seal (18) to size and attach it to the side panel (4).

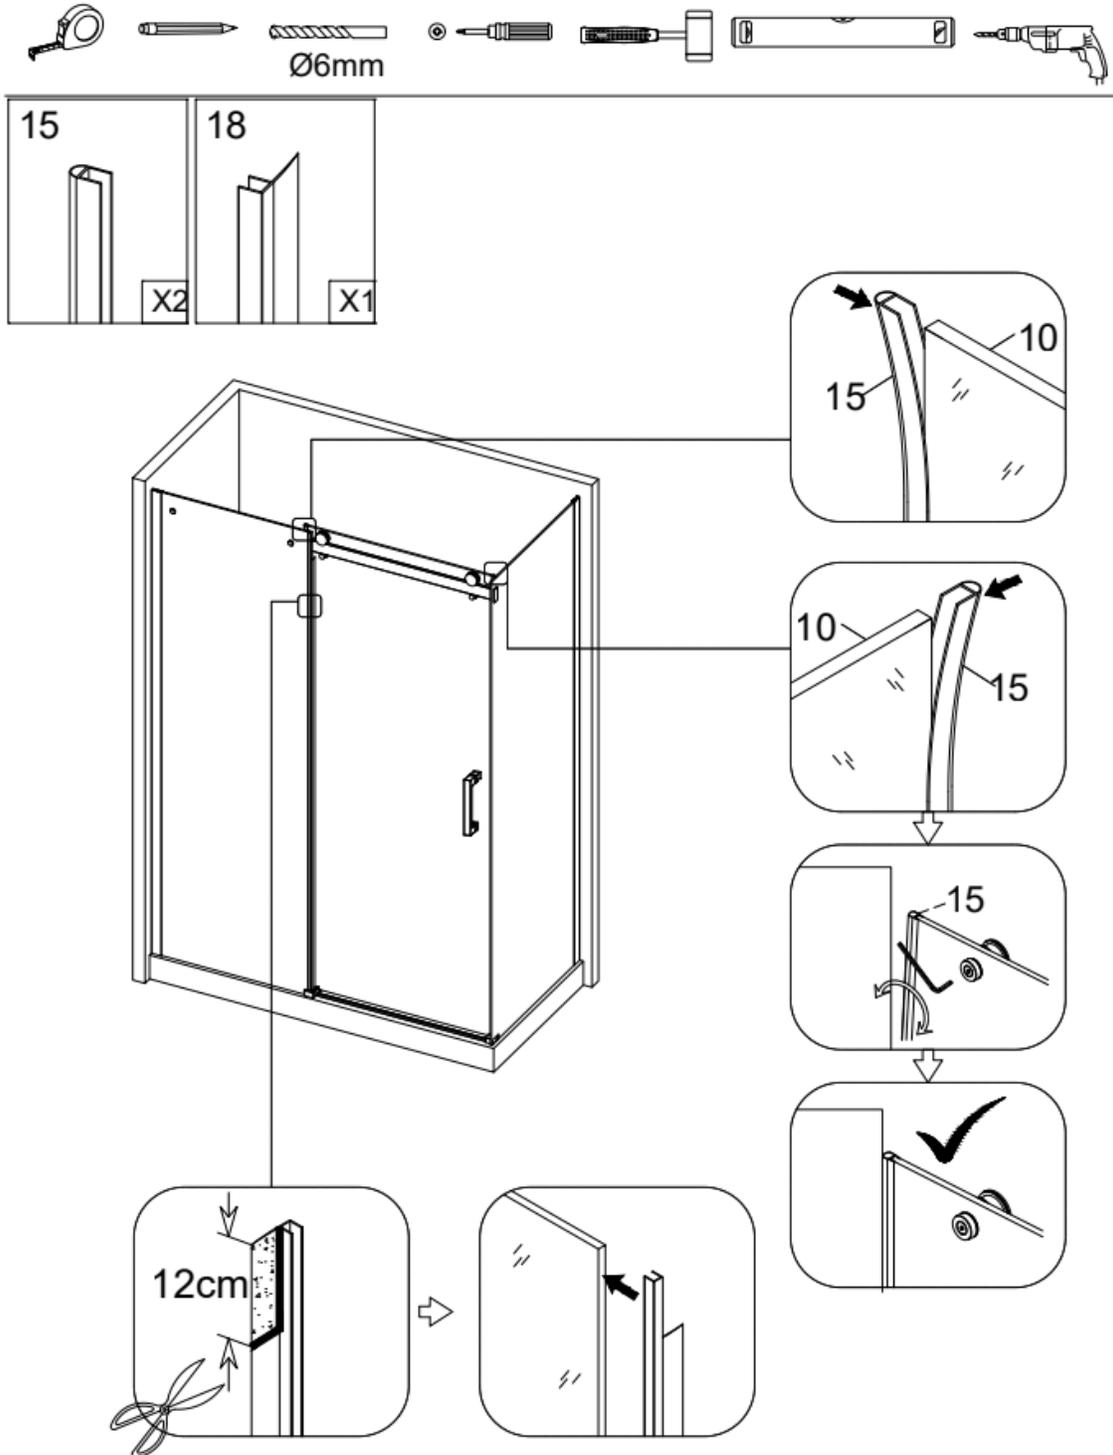

7. Seal the edges with silicone. Leave to dry for at least 24 hours.

