
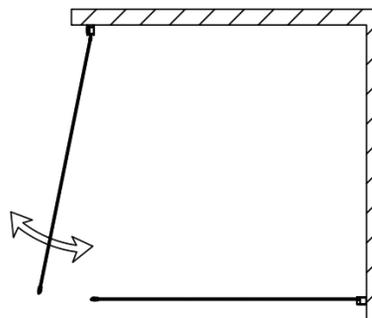
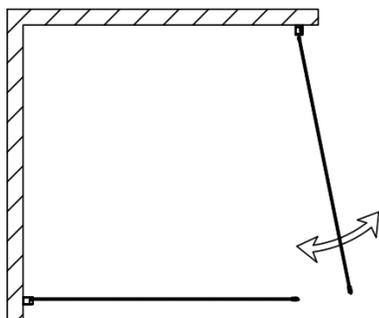
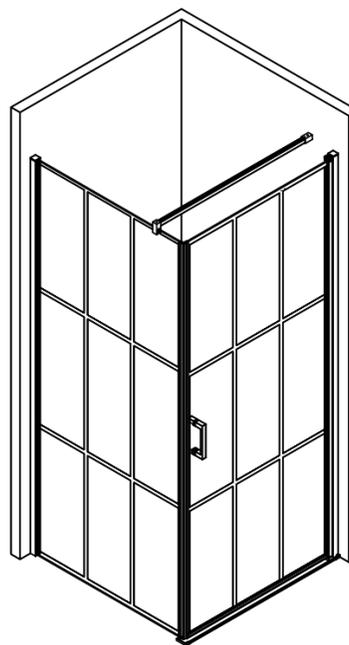



# INSTALLATION INSTRUCTIONS SHOWER ENCLOSURE

**A7**

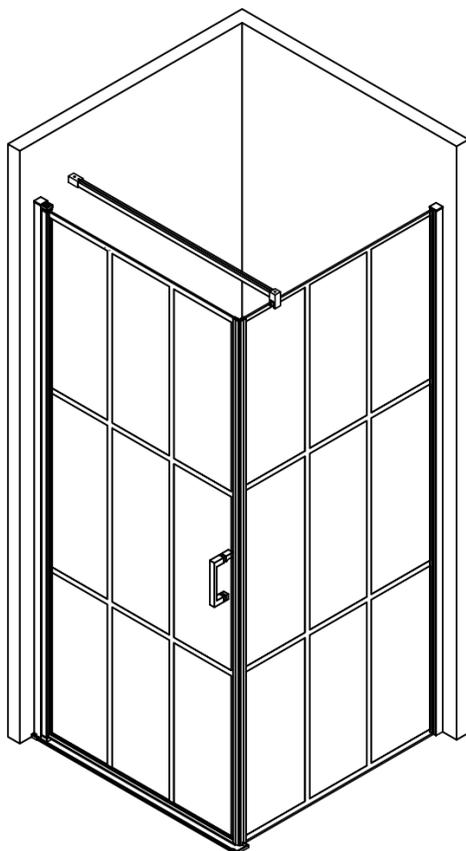


**Recommended installation by two persons**


Illustrative drawing (exploded view):

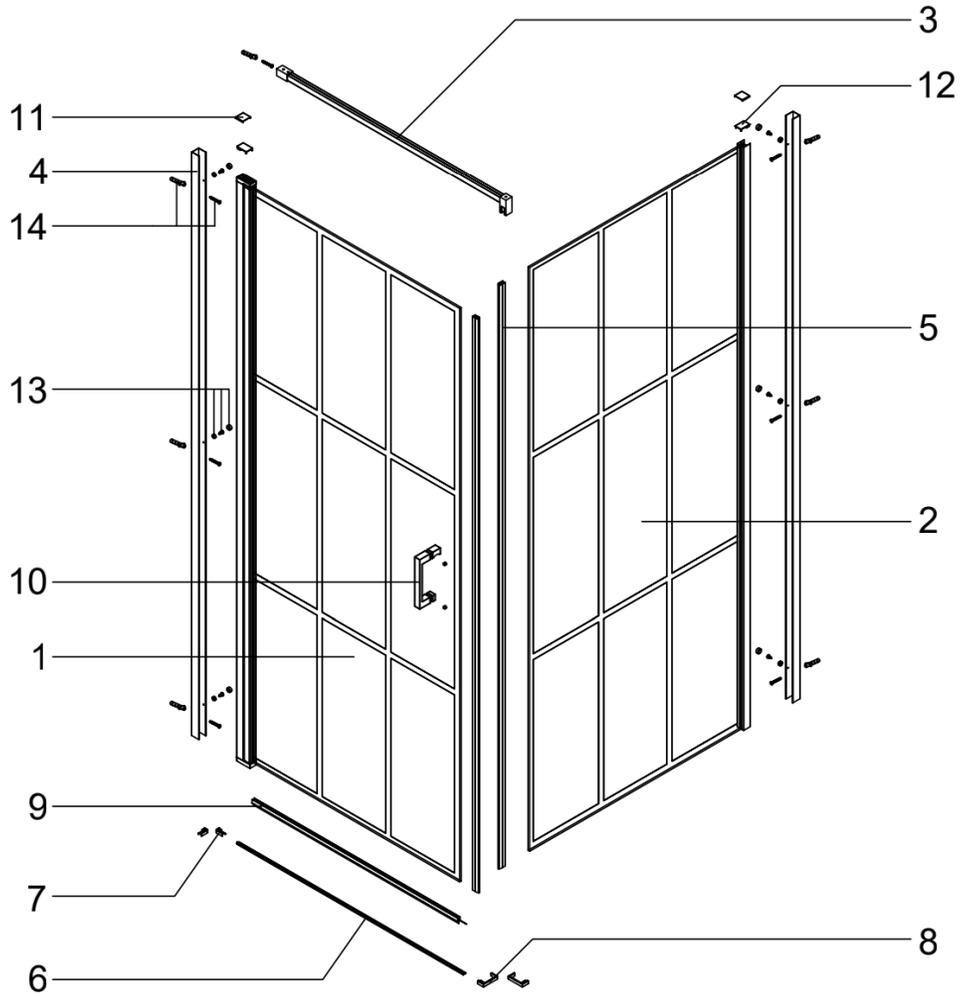



Required tools:

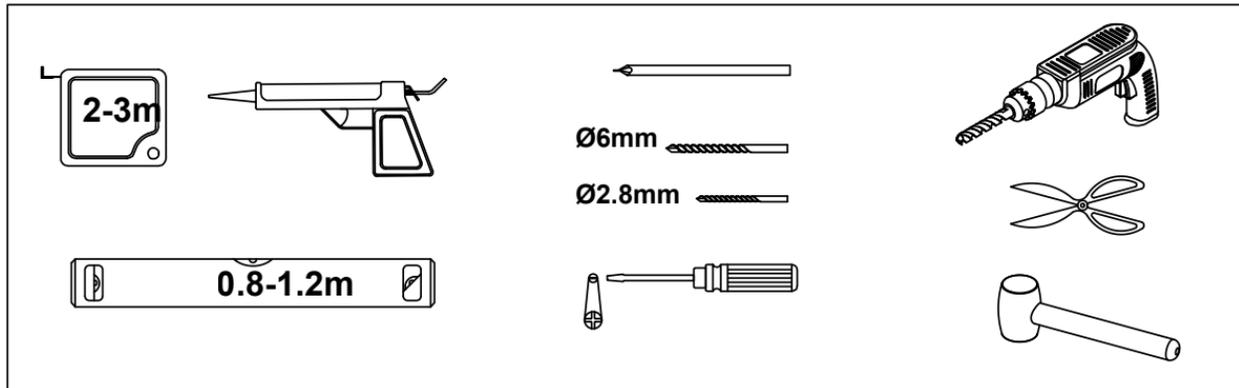




List of components:

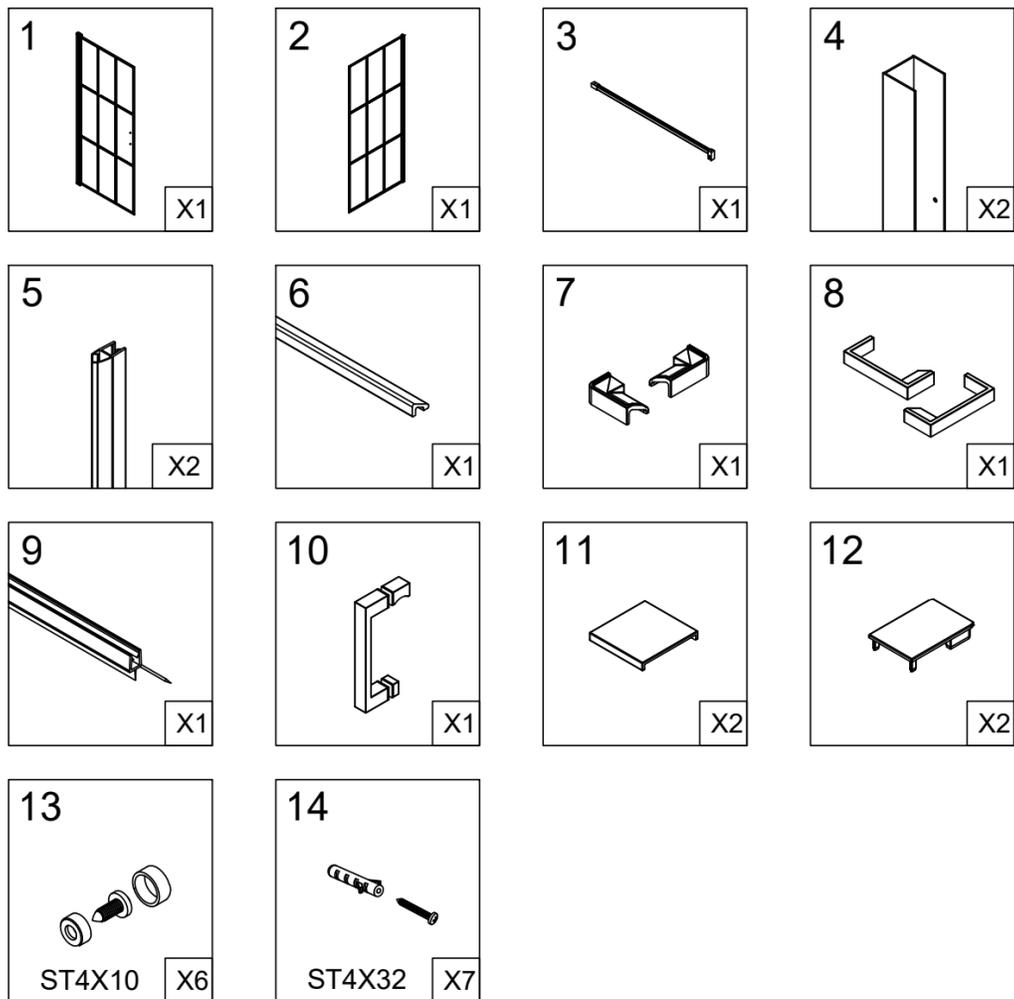



1. Measure the distances for mounting the vertical slats (4). The holes for mounting the enclosure are approximately 20-25 mm closer than the nominal dimensions of the enclosure (e.g. for a 90 cm x 100 cm enclosure, the mounting holes will be approximately 88 cm x 98 cm from the corner of the wall). Check the length of the shower enclosure walls and transfer the dimensions to the wall in such a way as to maintain right angles and a rectangular shape. Level the slats, drill holes for the dowels (14) and fix the slats to the wall using the screws provided.

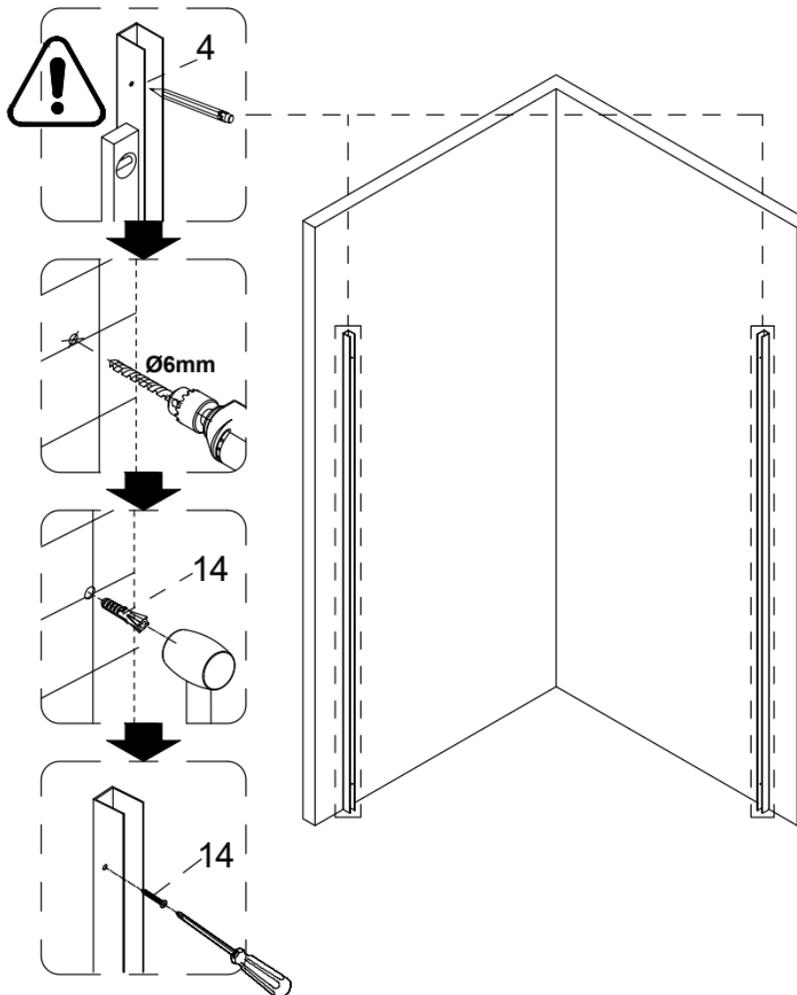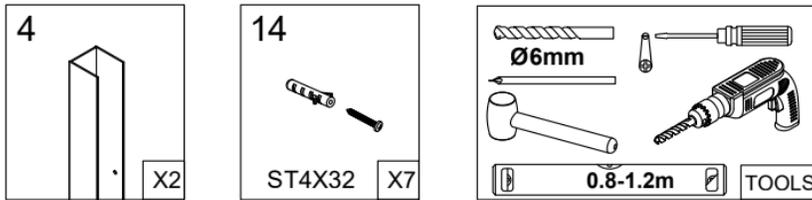


2. Connect the door (1) and side wall (2) to the strips (4).

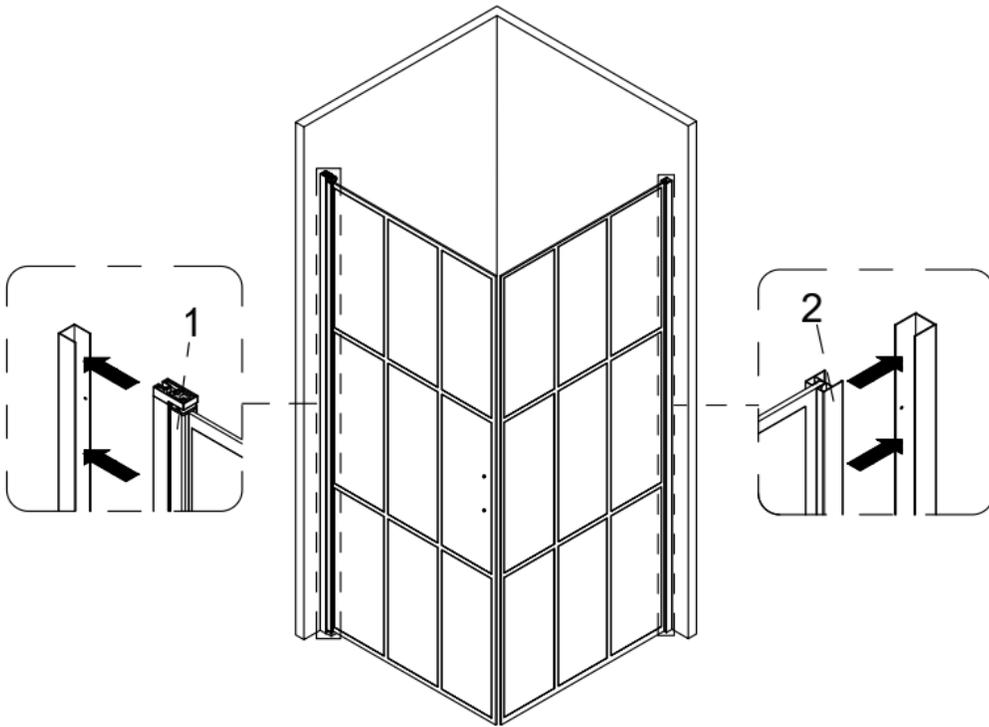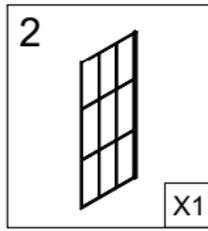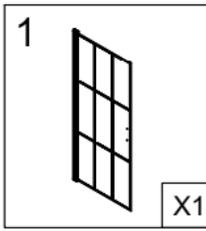




3. Attach the bracket (3) to the wall and side panel as shown in the drawings.

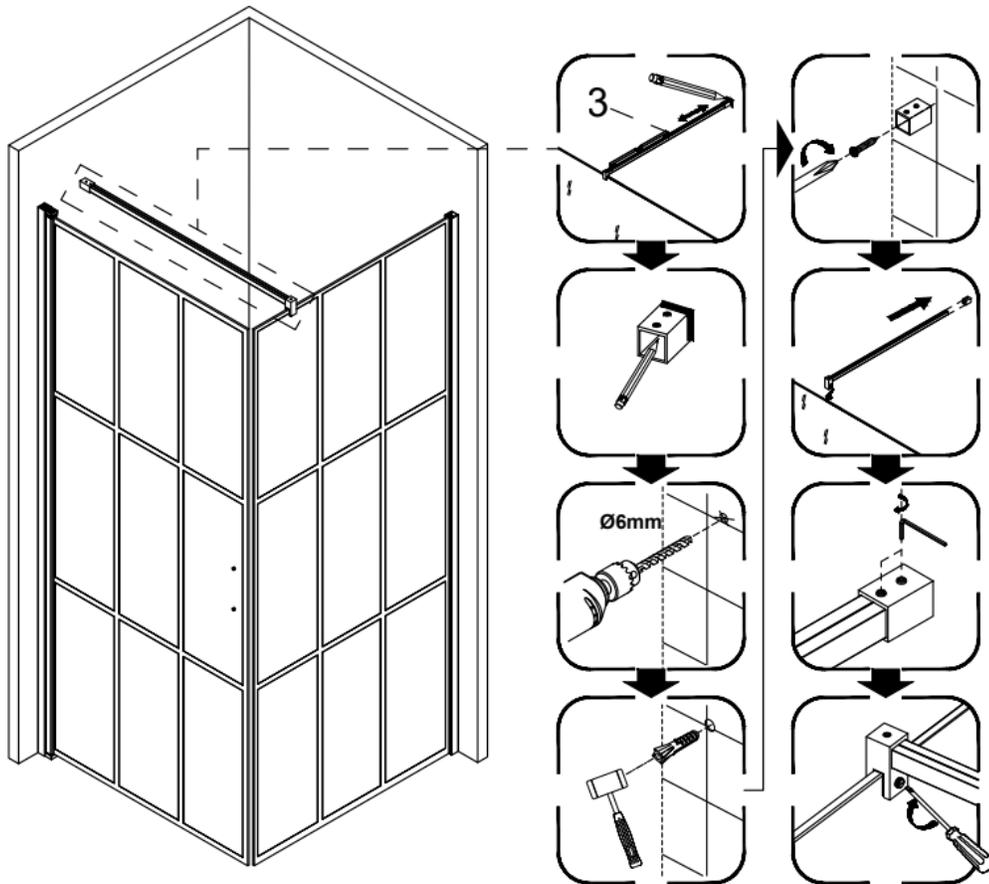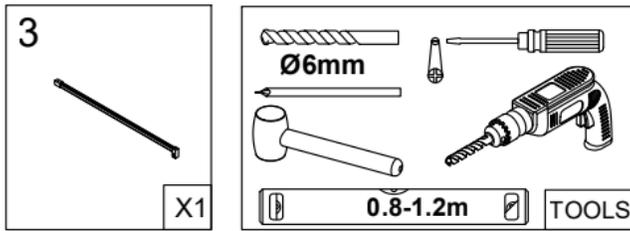

4. Attach the handle (10) to the door, the edging (5) to the door and wall, and the bottom edging to the door (9). Then install the threshold (6) and threshold corners (7, 8).

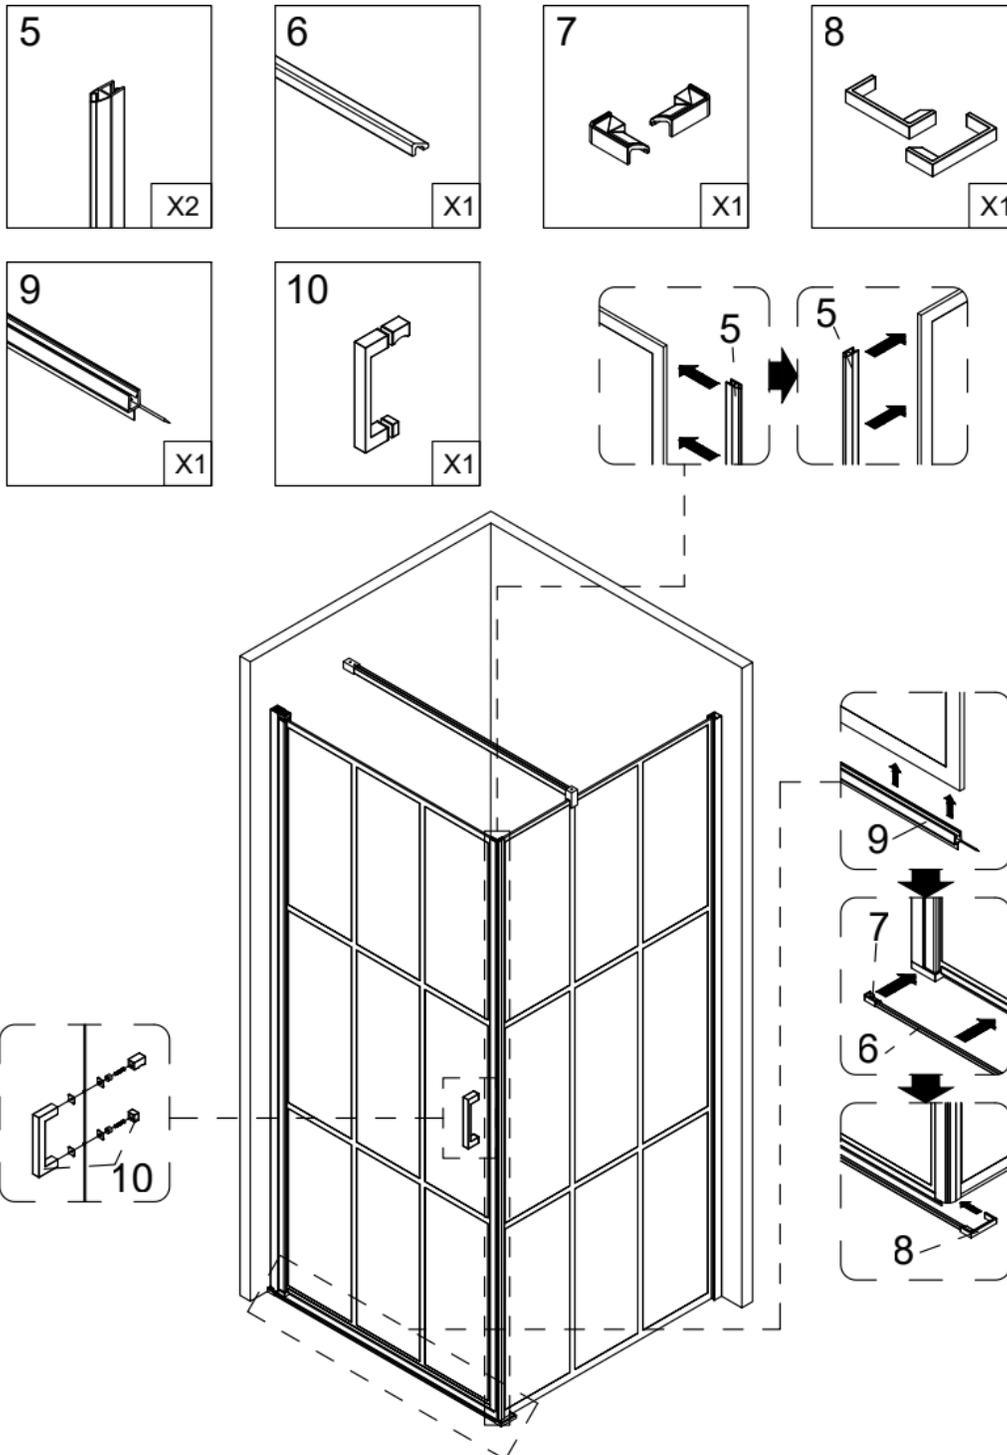

5. Install the top caps (11, 12).

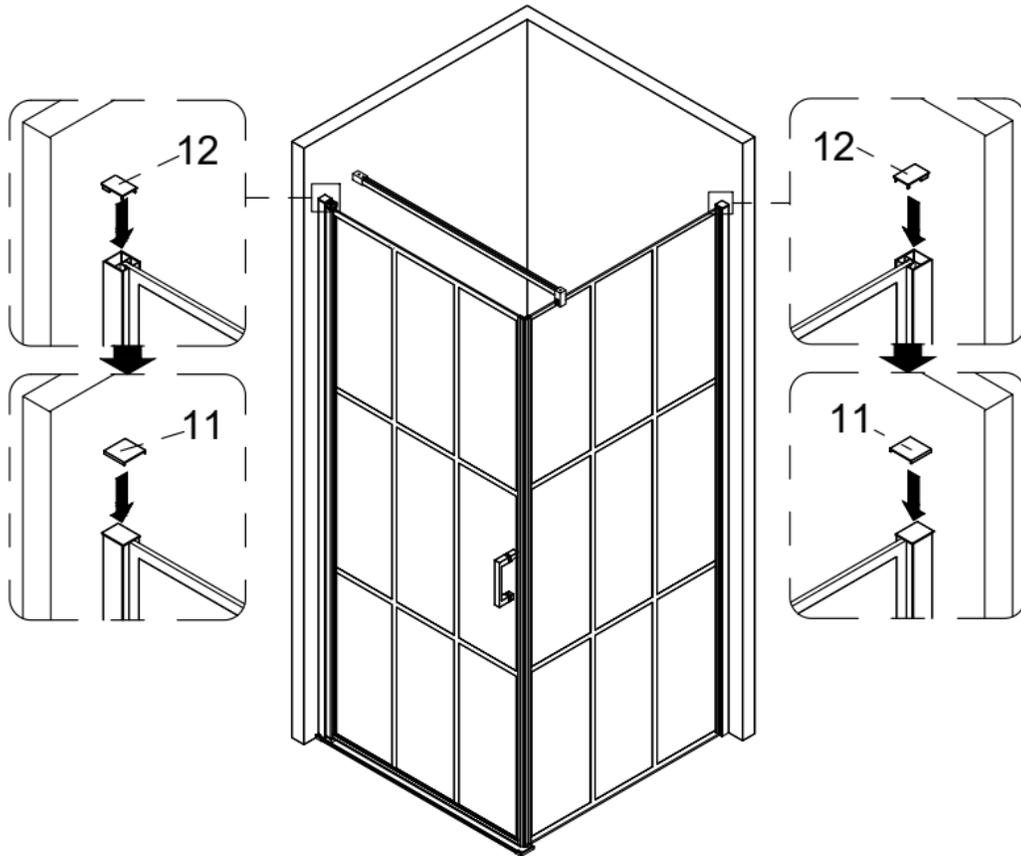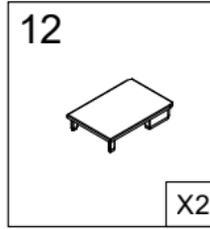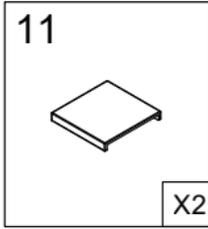

6. Seal the edges with silicone. Leave to dry for at least 24 hours.

