

TECHGLOBE Sp. z o.o.

Kolejowa 12, 23-200 Kraśnik, Poland

Tax Identification Number (NIP): PL9462697129


+48 510 510 945



www.techglobe.pl


INSTALLATION INSTRUCTIONS SHOWER ENCLOSURE

A8

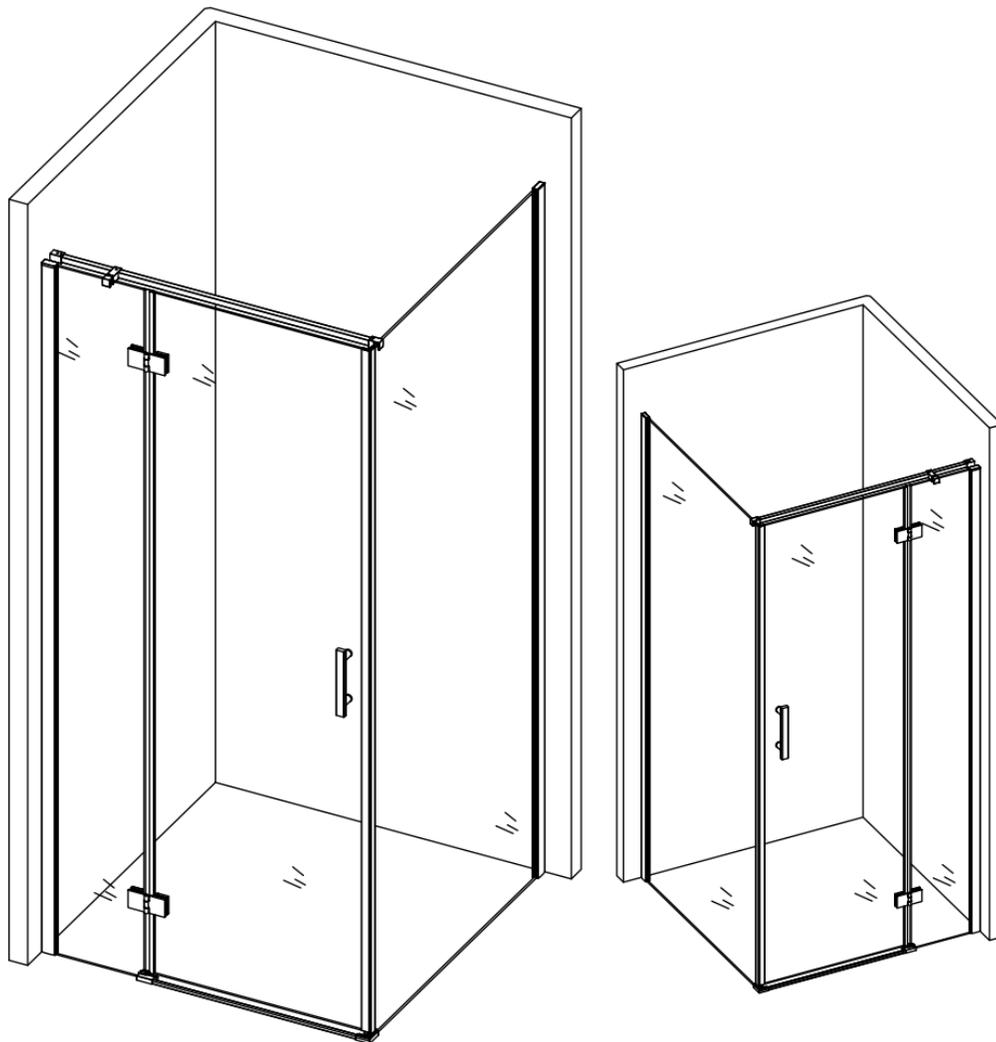


Recommended installation by two persons

















Illustrative drawing (exploded view):

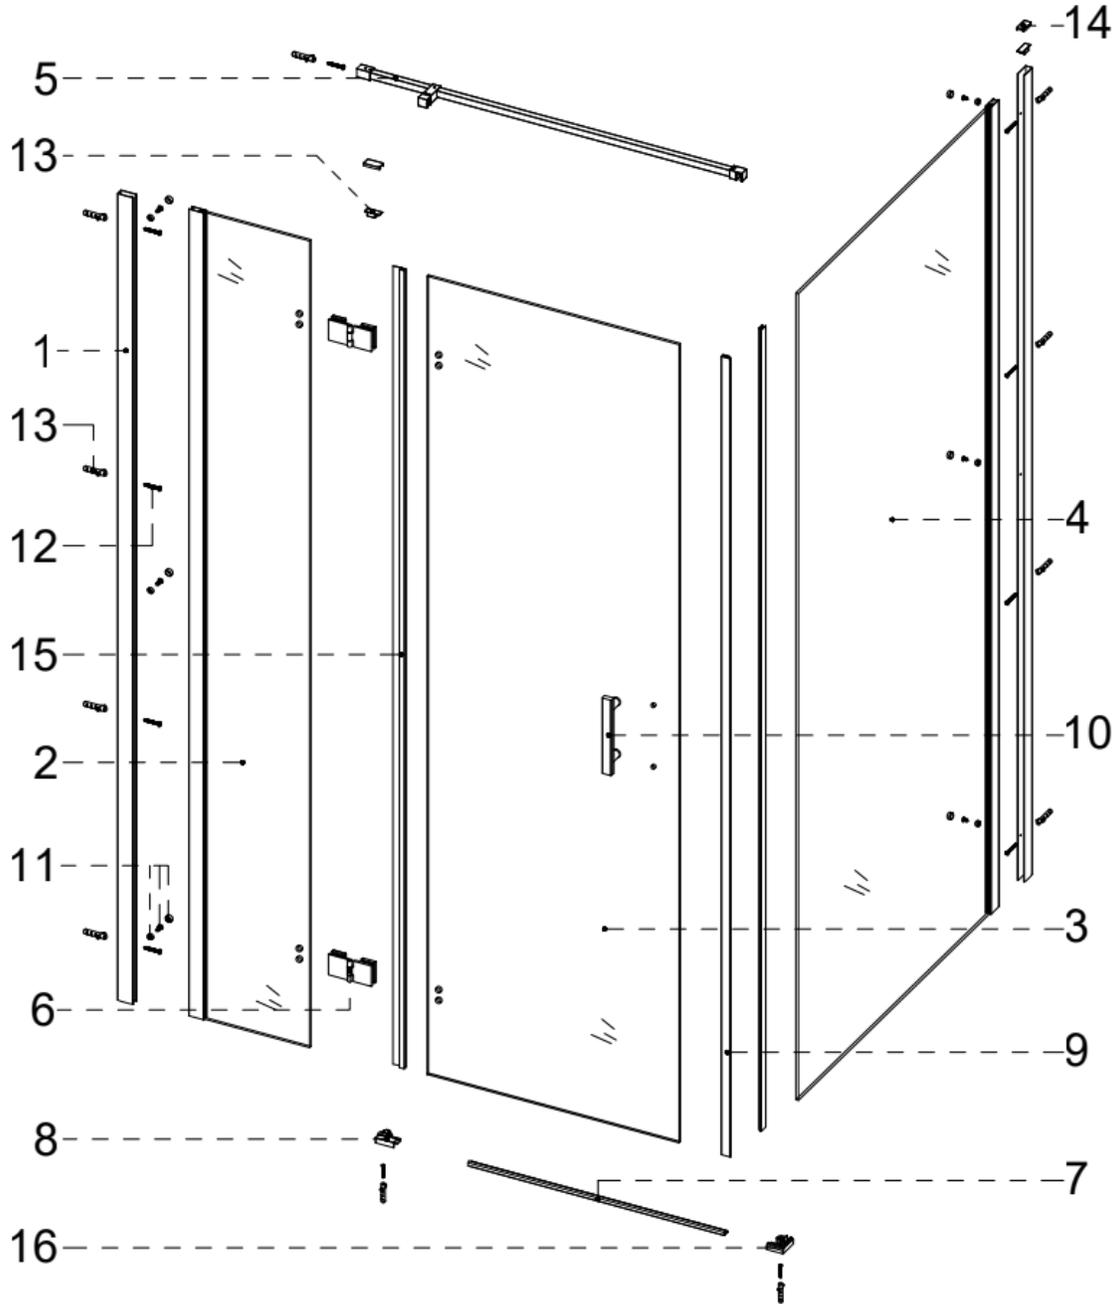



Required tools:

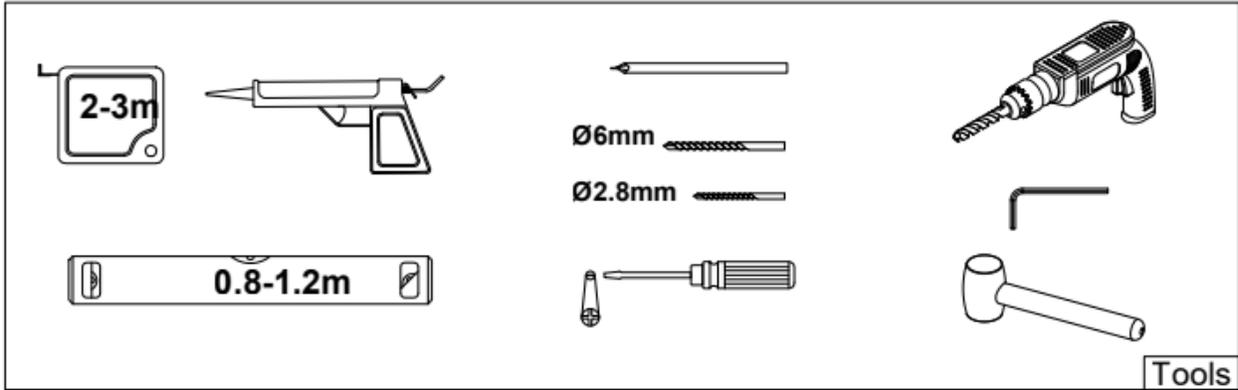







List of components:

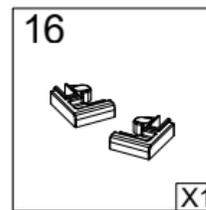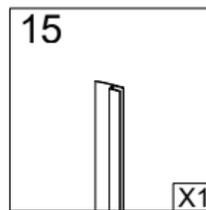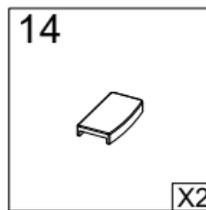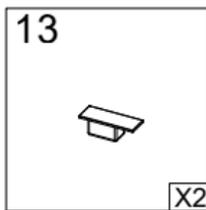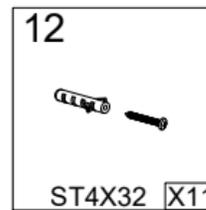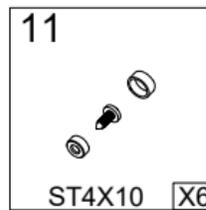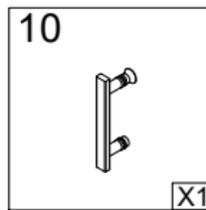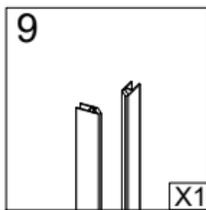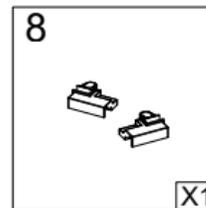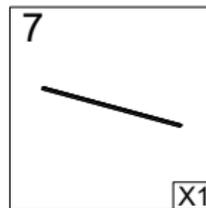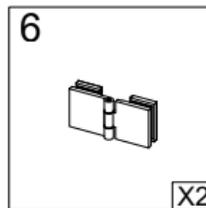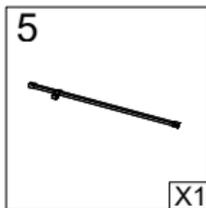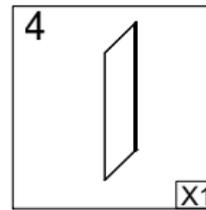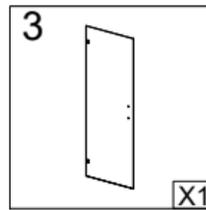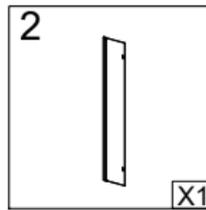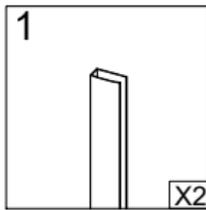


1. Measure the distances for mounting the vertical slats (1). **The holes for mounting the enclosure are approximately 20-25 mm closer than the nominal dimensions of the enclosure (e.g. for a 90 cm x 100 cm enclosure, the mounting holes will be approximately 88 cm x 98 cm from the corner of the wall). Check the length of the shower enclosure walls and transfer the dimensions to the wall in such a way as to maintain right angles and the rectangular shape of the enclosure.** Level the slats, drill holes for the dowels (12) and fix the slats to the wall using the screws provided.

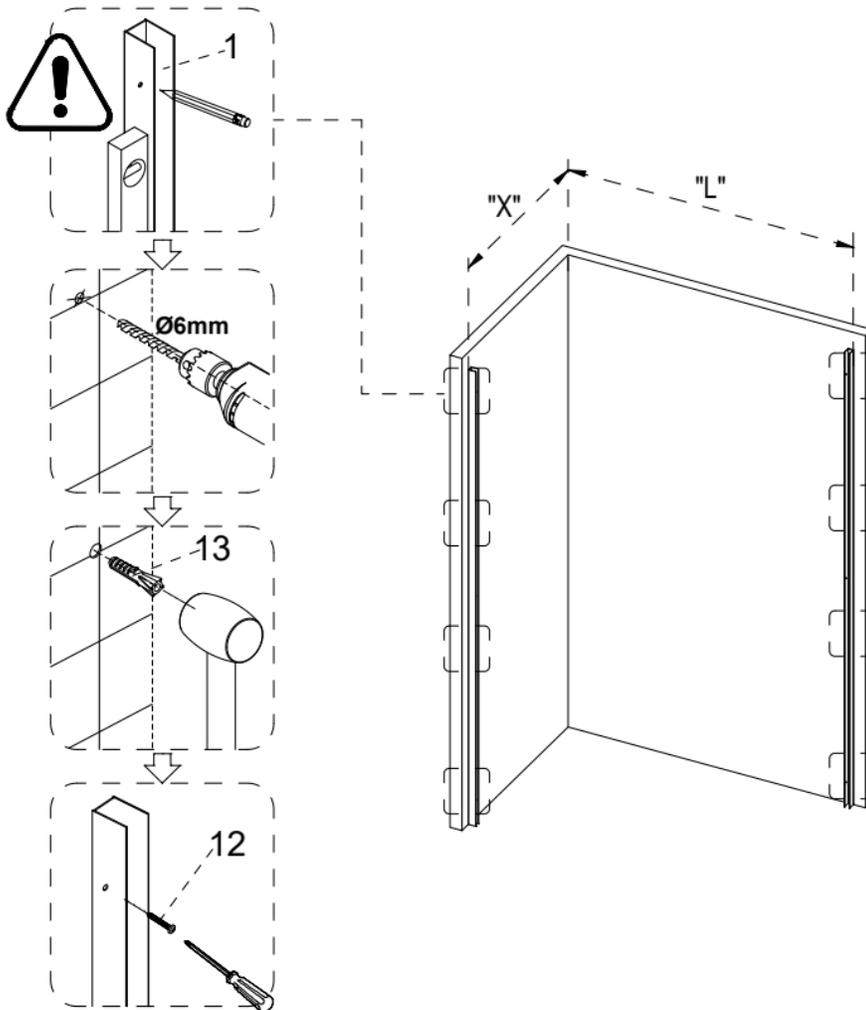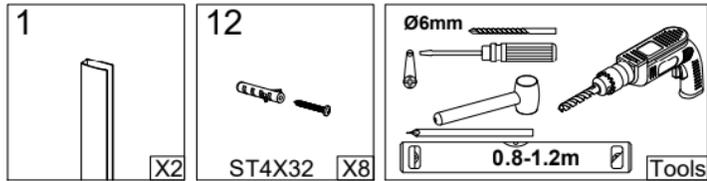



2. Screw the hinges (6) to the door (3) and then to the side wall (2). Fit the door edge (15).

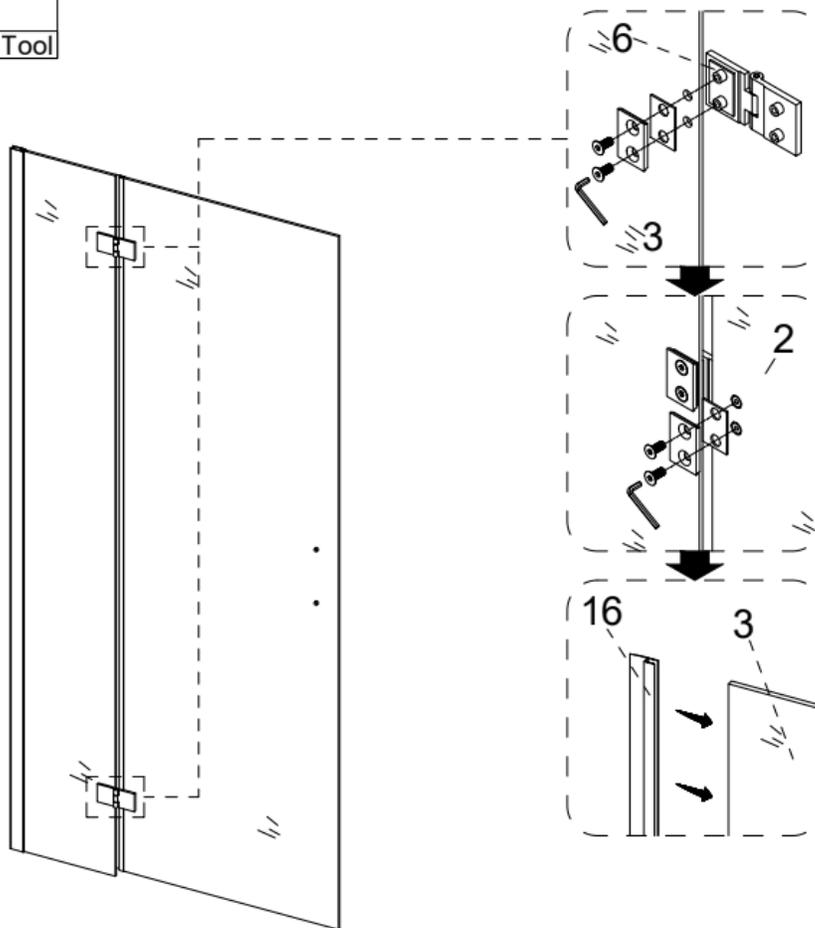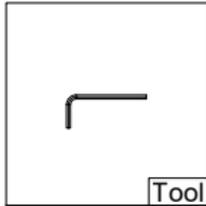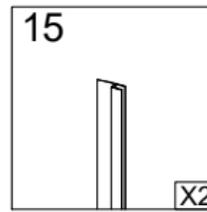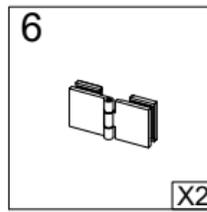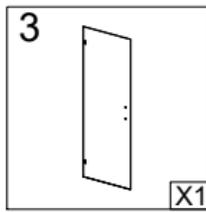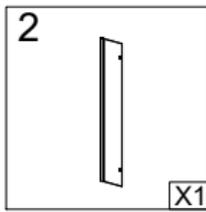



3. Attach the side wall (4) and the wall with the door. Fasten them to the vertical slats (9) using screws with caps (11). Fit the edges with magnets on the door and side wall.

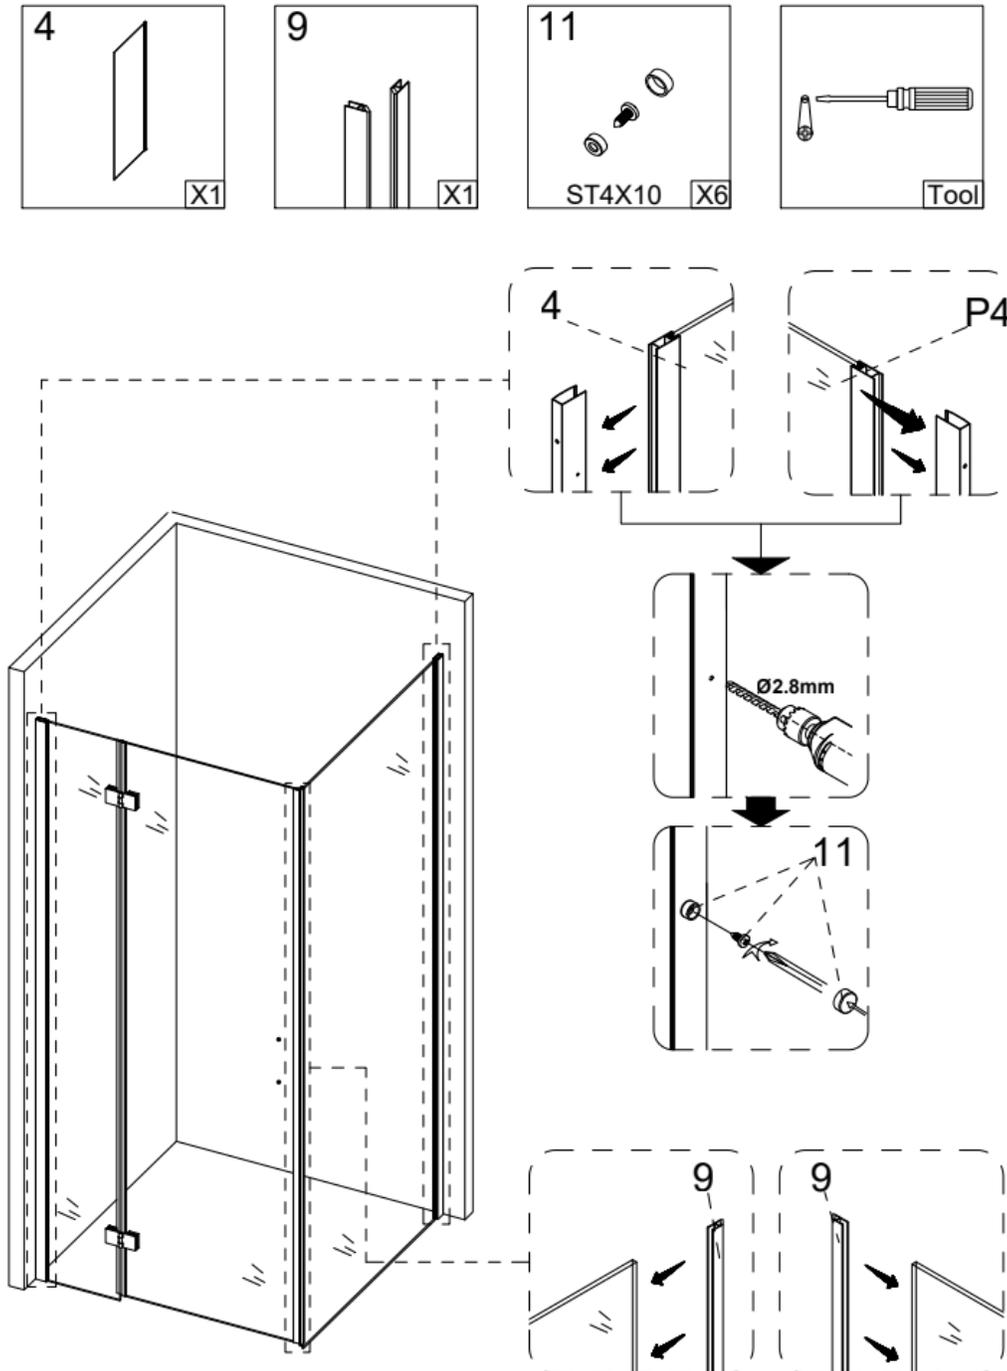

4. Attach the bracket (5) to the wall and side wall as shown in the drawings.

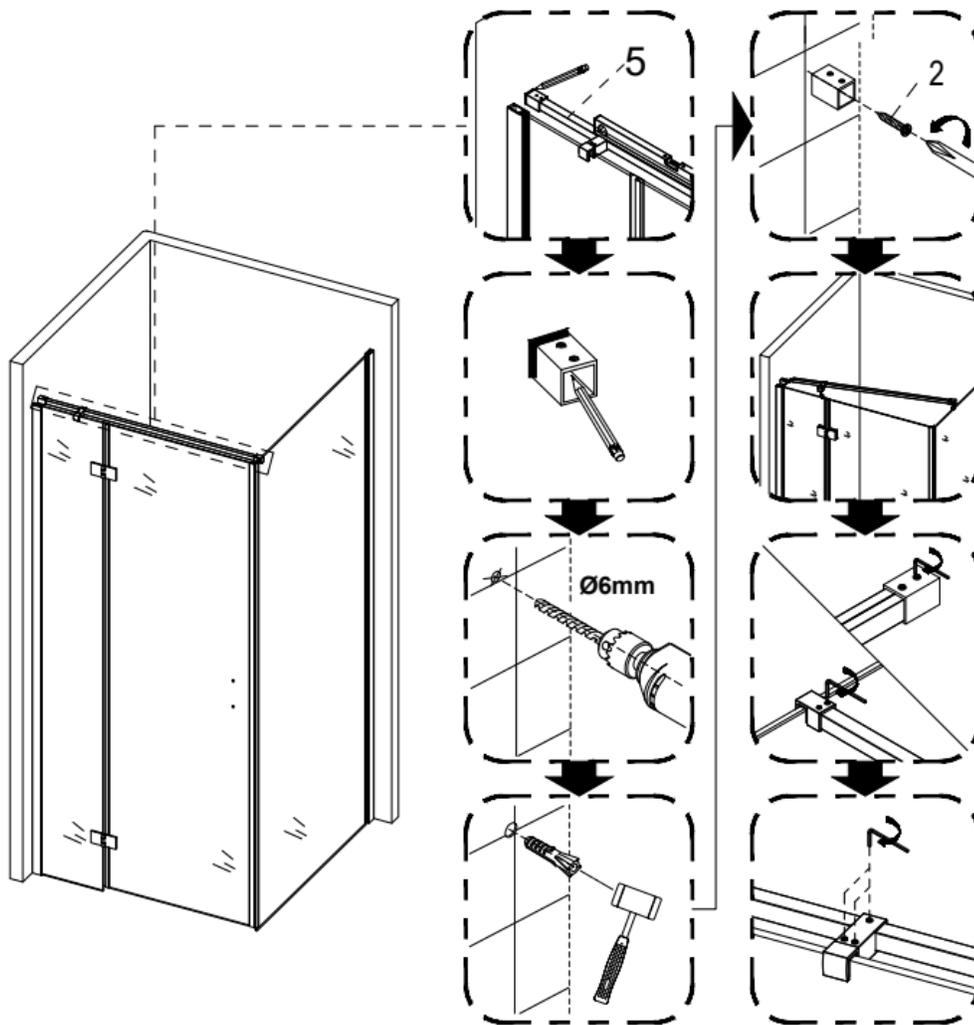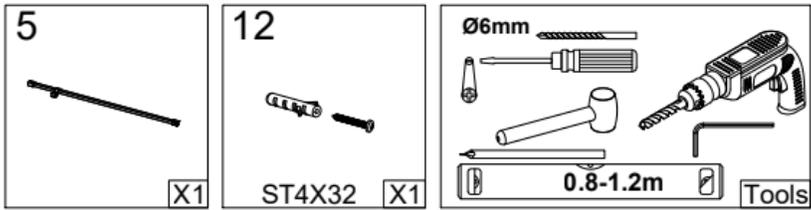

5. Attach the handle (9) to the door and the threshold (7) using the brackets (8, 16). Install the top caps (13, 14).

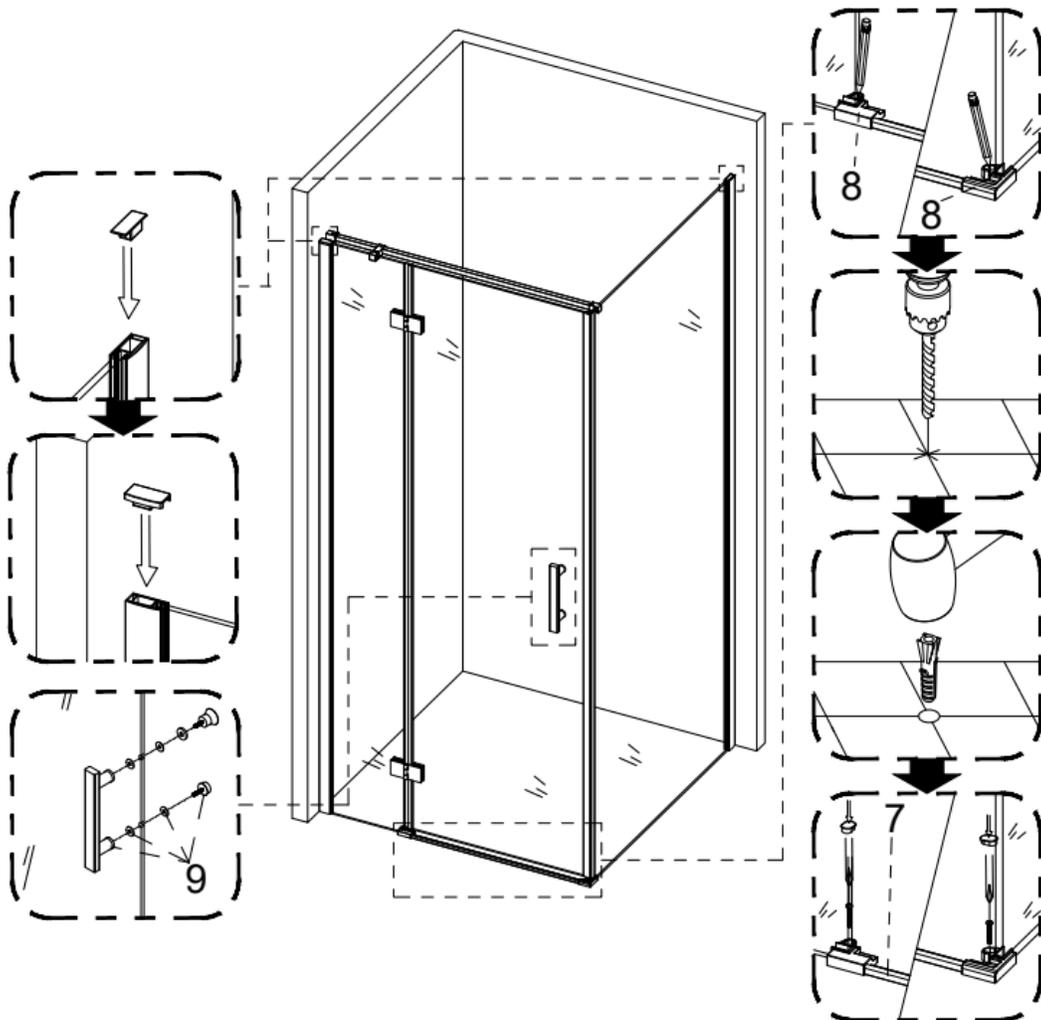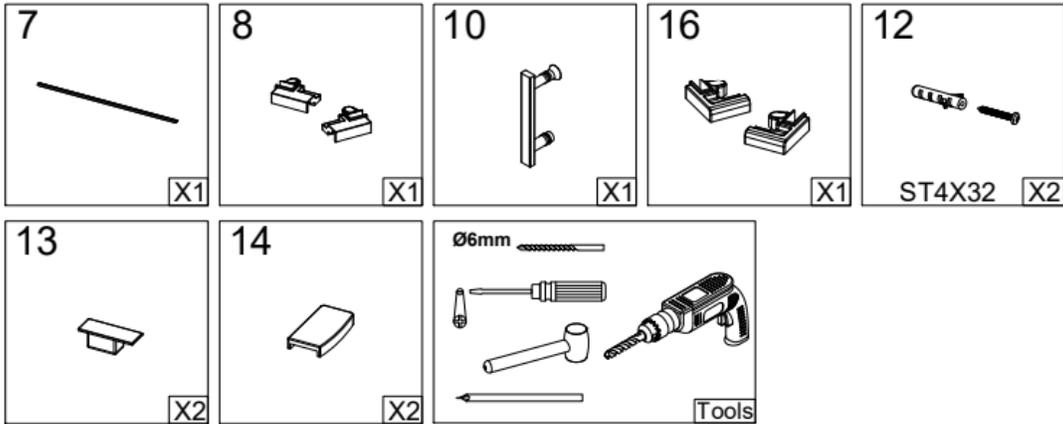

6. Seal the edges with silicone. Leave to dry for at least 24 hours.

